popbox V8™

Operation Guide

Table of Contents

1. Introduction 2

2. Check your package 2

3. Safety Notes 3

4. Technical Specifications 4

5. Getting Started 5

5.1 Popbox V8 Overview 5

5.2 Connecting to HDMI TV 6

5.3 Connection to Composite TV 7

5.4 Connecting to component TV 8

6. Your remote control 9

7. Introduction to Home menu 12

8. Quick Setup Wizard 13

9. Setup 19

9.1 Setup - Preference 20

9.2 Setup – Audio 21

9.3 Setup – Video 22

9.4 Setup – Network (Configure IP) 24

9.5 Setup - Network Share 25

9.5.1 Add Share 26

9.5.2 Browse Share 27

9.5.3 Edit Share 28

9.6 Setup – Parental Control 29

9.7 BD/DVD/Audio CD 30

9.8 Setup – Maintenance 31

9.8.1 – Firmware Update 32

10. Apps Market 33

10.1 Login to Apps Market 35

11. File Browser 36

All Rights Reserved ©

11.1 File browser view mode **36**

11.2 File Browser Settings **37**

11.3 File Manager **39**

12. Movie Meta Data **40**

12.1 Movie Info Page Walk-through **41**

12.2 Download Movie Thumbnail and Meta-Data **42**

12.3 Edit or Update Movie Information **44**

12.4 Download subtitles **47**

13. Media Playback Remote Function **49**

14. Troubleshooting **51**

1. Introduction

You have made the right choice in buying the Popbox V8 networked media player. Powered by Syabas Technology, the Popbox V8 is a state of the art digital entertainment center with TV apps market to enhance your home entertainment.

2. Check your package

1. Popbox V8
2. Remote Control
3. 2x AAA Batteries
4. HDMI Cable
5. Break Out Cables (Composite and Component Video Output)
6. AC Adapter

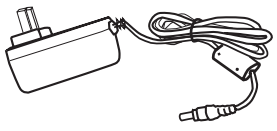

AC Adapter

Component Video cable

2x AAA batteries

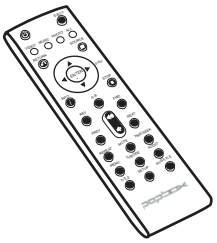

Remote control



HDMI cable

Composite-Stereo cable

Popbox V8

All Rights Reserved ©

3. Safety Notes

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

1) Read these instructions.

2) Keep these instructions.

3) Heed all warnings.

4) Follow all instructions.

5) Do not use this device near water.

6) Clean only with dry cloth.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10)Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11)Only use attachments/accessories specified by the manufacturer.

12)Unplug this device during lightning storms or when unused for long periods of time.

13)Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING:
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,

1)DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

2)USE ONLY THE RECOMMENDED ACCESSORIES.

3)DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION!
DO NOT INSTALL OR PLACE THIS UNIT IN A BOOK-CASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.

4. Technical Specifications

Hardware	Specification
CPU	Sigma Designs SMP8671, 700MHz CPU
Memory	256MB DDR2 DRAM, 256MB NAND Flash
AV Outputs	HDMI v1.3a, Component Video, Composite Video, Stereo Analog Audio, Digital Optical
Interface	2 x Host USB 2.0 (Front and Back)
Network	10/100 Mbps Ethernet, Wireless N USB dongle (optional)
Chassis Dimension / Weight	Vented Aluminum Body, Fanless, Quiet Operation 128mm(W) x 30.5mm(H) x 100mm (L) Weight: 250g
Power	12V DC, 2A Max
Software	**Specification**
Video	MPEG1/2/4 Elementary (M1V, M2V, M4V), MPEG1/2 PS (M2P, MPG, DAT, VOB), MPEG2 Transport Stream (TS, TP, TRP, M2T, M2TS, MTS), AVI, ASF, WMV, Matroska (MKV), MOV (H.264), MP4 XVID SD/HD, MPEG-1, MPEG-2 MP@HL, MPEG-4.2 ASP@L5, 720p, 1-point GMC, MPEG-4.10 (H.264) : BP@L3, MP@L4.0, HP@L4.0, HP@L4.1, WMV9 : MP@HL, SMPTE 421M (VC-1) : MP@HL, AP@L3,
Audio	AAC, M4A, MPEG audio (MP1, MP2, MP3, MPA), WAV, WMA, FLAC, OGG, APE, TTA
Photo	JPEG, BMP, PNG, GIF, TIFF
Decoder	Dolby Digital, DTS, WMA, WMA Pro, MPEG-1(Layer 1,,2, 3), MPEG-4 AAC-LC, MPEG-4 HE-AAC, MPEG-4 BSAC, LPCM, FLAC, Vorbis
Pass-through	DTS, DTS-HD HR, DTS-HD MA, Dolby Digital, Dolby Digital Plus, Dolby True HD
Decoder	Dolby Digital, DTS, WMA, WMA Pro, MPEG-1(Layer 1,,2, 3), MPEG-4 AAC-LC, MPEG-4 HE-AAC, MPEG-4 BSAC, LPCM, FLAC, Vorbis h
Other Formats	ISO and IFO navigation, Simple BD navigation
Subtitle	SRT, MicroDVD SUB, SSA, SUB/IDX, Opensubtitle

All Rights Reserved ©

5. Getting Started

5.1 Popbox V8 Overview

1) Power
2) USB 2.0 Host
3) Component Video terminal
4) Composite Video + RCA (Stereo) terminal
5) HDMI 1.3 terminal
6) 10/100Mbps LAN port
7) Digital Optical terminal
8) USB 2.0 Host

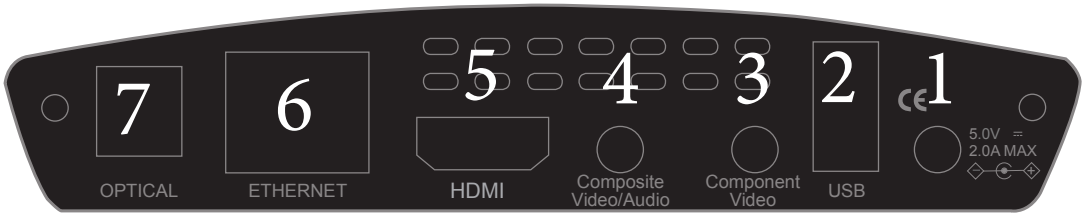

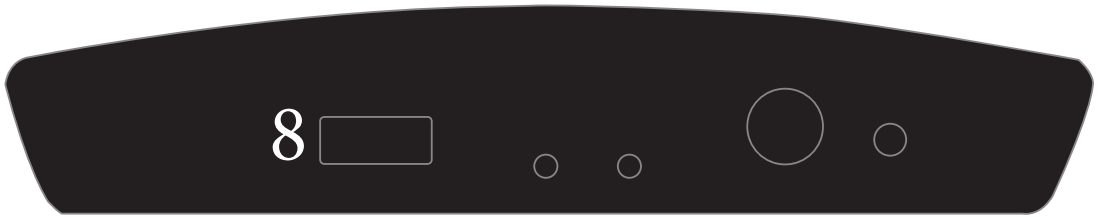

5.2 Connecting to HDMI TV

What you need:

- Popbox V8
- Power Supply
- HDMI cable
- TV with HDMI terminal

Step 1

Connect the HDMI cable to your TV HDMI terminal and the other end to your Popbox V8.

Tips: Some HDMI TV has input and output HDMI terminal. Please make sure the HDMI terminal is connected to input rather than output.

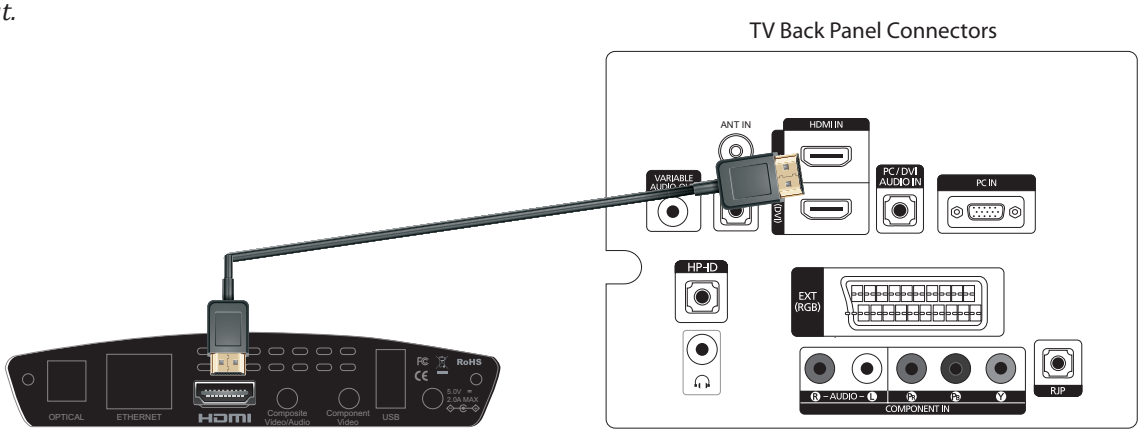

Step 2

Connect the power supply to your wall socket and connect the power lead to Popbox V8. Your Popbox V8 is booting up now, check your TV for further instructions.

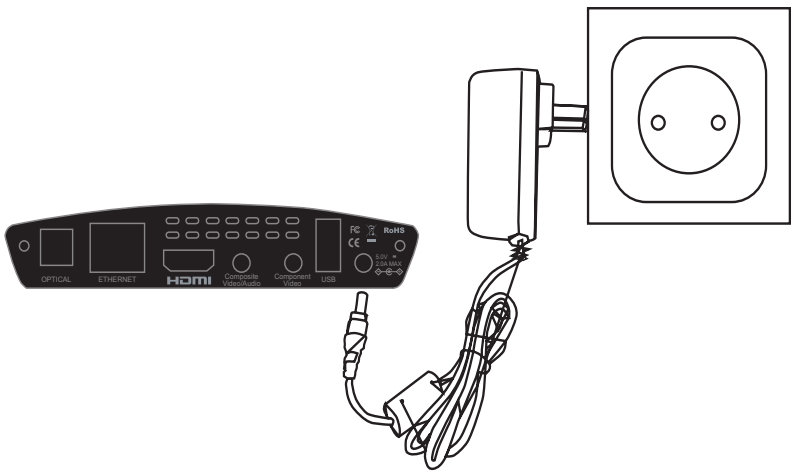

All Rights Reserved ©

5.3 Connection to Composite TV

What you need:

- Popbox V8
- Power Supply
- Composite break-out cable (Grey break-out cable)
- TV with composite terminal

Step 1

Connect the supplied composite break-out cable, to the composite terminal of your TV and the other end to **composite** terminal of Popbox V8.

Tips: Many TV's has input and output terminal for composite connection. Please ensure that it is connected to input terminal.

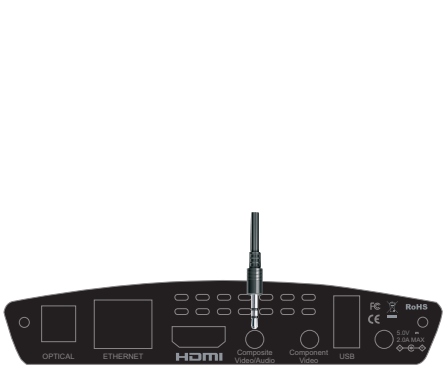

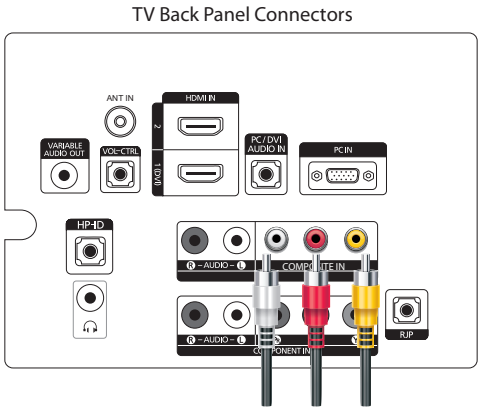

Step 2

Connect the power supply to your wall socket and connect the power lead to Popbox V8. Your Popbox V8 is booting up now, check your TV screen for further instructions.

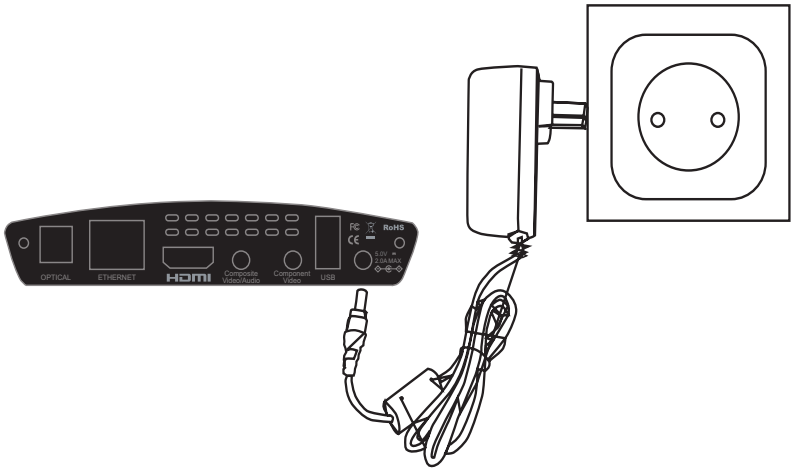

5.4 Connecting to component TV

What you need

- Popbox V8
- Power Supply
- Component and Composite break-out cable
- TV with component video terminal

Step 1

Connect the supplied video component break-out cable to component input terminal on your TV. Connect the composite break-out cable to the stereo (RCA) input terminal on your TV for audio.

Tips: Do not connect the yellow cable (video signal) to your TV, it is not necessary since the video signal is carried by the component cable.

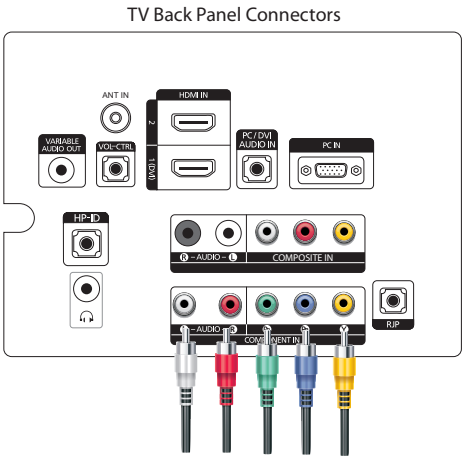

Step 2

Connect the power supply to your wall socket and connect the power lead to Popbox V8. Your Popbox V8 is booting up now, check your TV screen for further instructions.

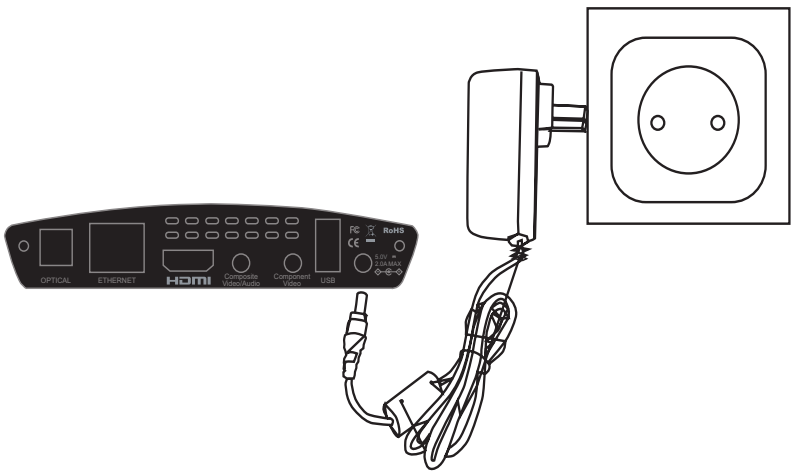

All Rights Reserved ©

6. Your remote control

Power	Press once to stand-by the device
Eject	Eject optical disc from disc rom if connected
RED Video	Context sensitive; refer to the legend on the bottom of the user interface
GREEN Music	Context sensitive; refer to the legend on the bottom of the user interface
YELLOW Photo	Context sensitive; refer to the legend on the bottom of the user interface
BLUE ALL	Context sensitive; refer to the legend on the bottom of the user interface
RETURN 	Return to previous menu
PLAY / PAUSE 	Play the higlighted file or the playlist in the folder. Pause media playerback
D PAD 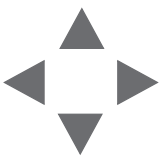	Navigating within the user interface

ENTER	To confirm selection or start media playback of a single file
INFO	Bring up meta-data of selected media file
STOP	Stop media playing back
A-B HOME	In Apps Market, press HOME to return to Home Menu
REV	Rewind the current media playback
FWD	Fast-forward the current media play-back
PREV	Skip backward within playlist
NEXT 	Skip forward within playlist
VOL UP/ VOL DOWN 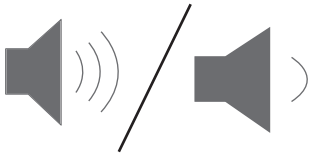	Adjust volume loudness

All Rights Reserved ©

REPEAT	Repeat the current media playback
MUTE 	Mute Audio
TIME SEEK	Jump to specific part of movie or music files by specifying the time
MENU	Bring up SimpleBD Menu
TV Mode	Adjust TV ratio and Resolution
Audio 	On Screen Audio Settings during Movie playback
Title	Bring up Title menu where supported
Setup	Quick access to setup page
Subtitle	On Screen subtitle menu during movie playback

7. Introduction to Home menu

Summary: The HOME screen is where the fun begin, useful information such as the weather and time is shown here.

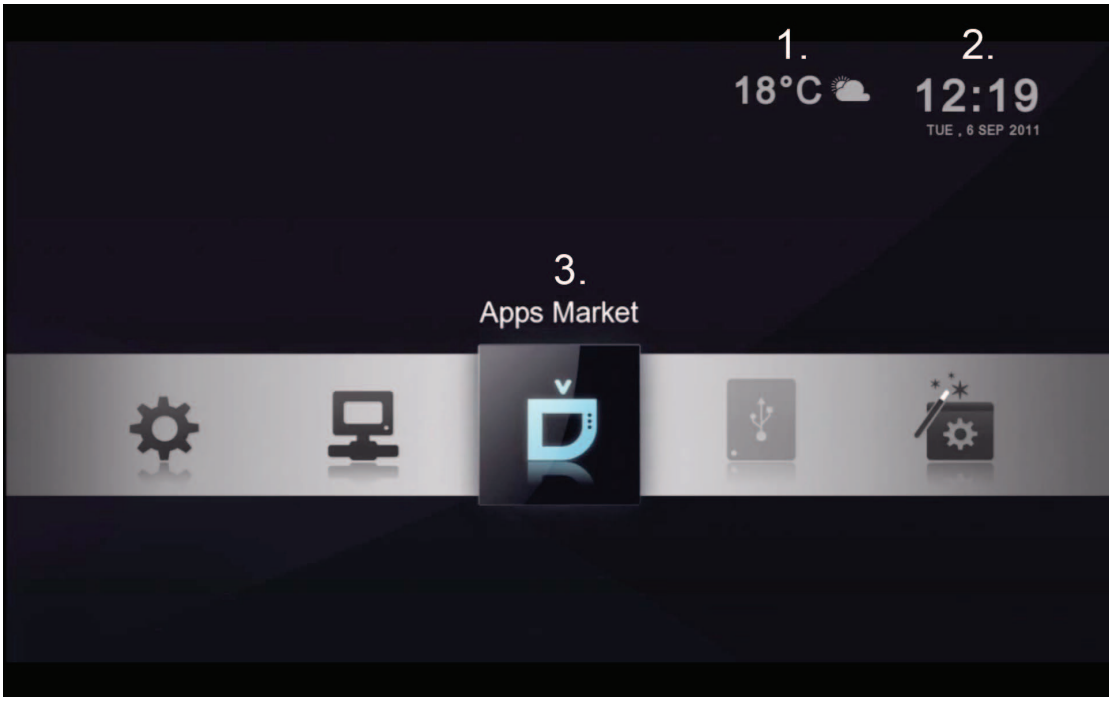

Weather Forecast

Know the weather without leaving the comfort of your couch.

Time and Date

Current date and time

Menu Bar

Apps Market	Free and premium on-demand video, social networking and game apps for your TV.
Local Media	Access your external connected USB devices.
Setup Wizard	Quickly setup your media player.
Setup	Advance settings such as audio/video outputs, subtitle languages, parental control.
Network	Browse your local area network for your shared folders that contains your digital media files.

All Rights Reserved ©

8. Quick Setup Wizard

Summary: Setting up your Popbox V8 using the setup wizard, is vital for proper operation of the media player. For advance users, you may skip to Chapter 7.

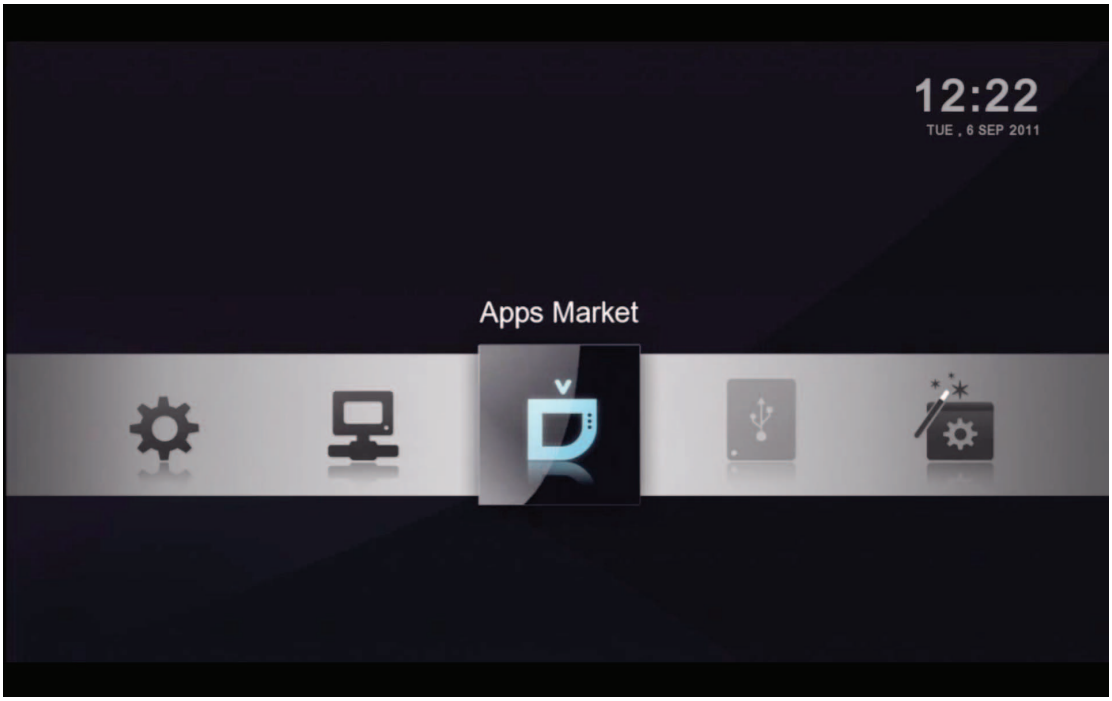

Using your remote control, navigate to the **Setup Wizard** icon and press *Enter.*

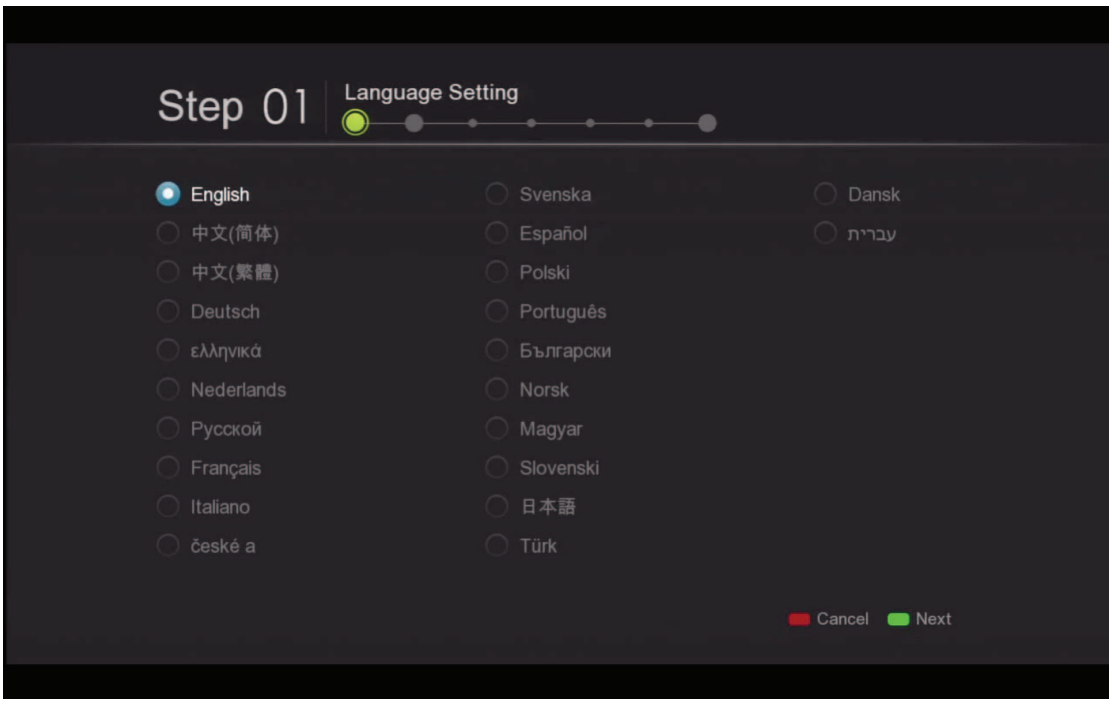

Choose your desired language for user interface. Proceed to next step by pressing

Tips: This does not affect subtitle language

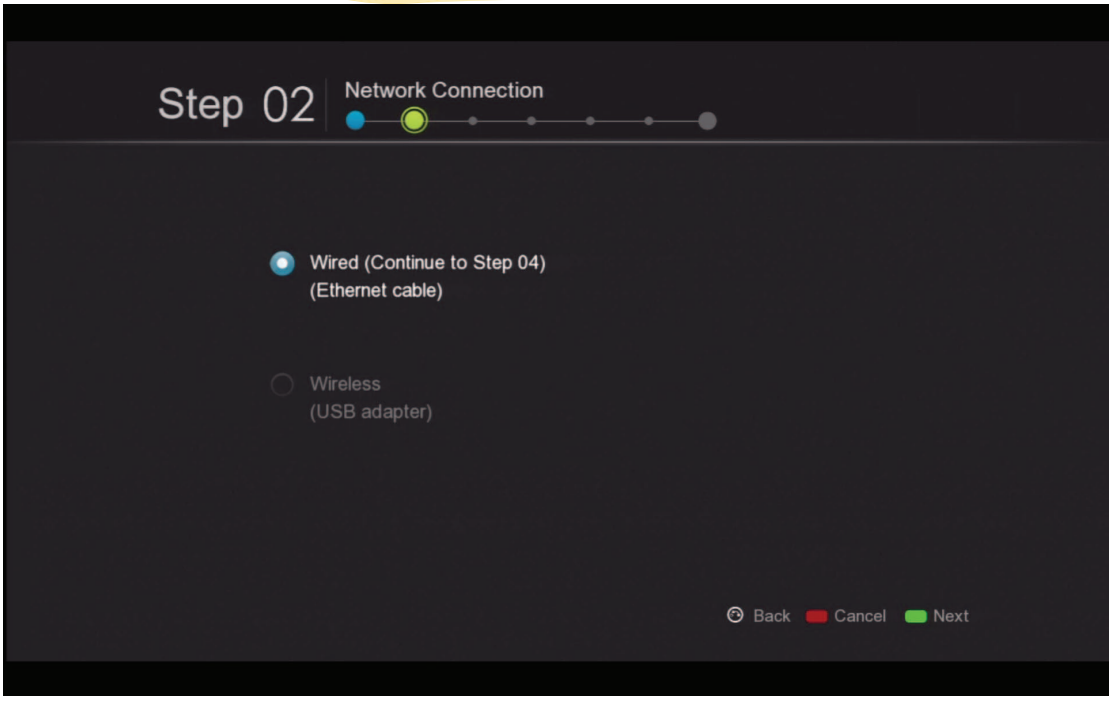

Choose your connection type according and press

1) Wired (Ethernet Cable)
2) Wireless (Optional wireless dongle needed)

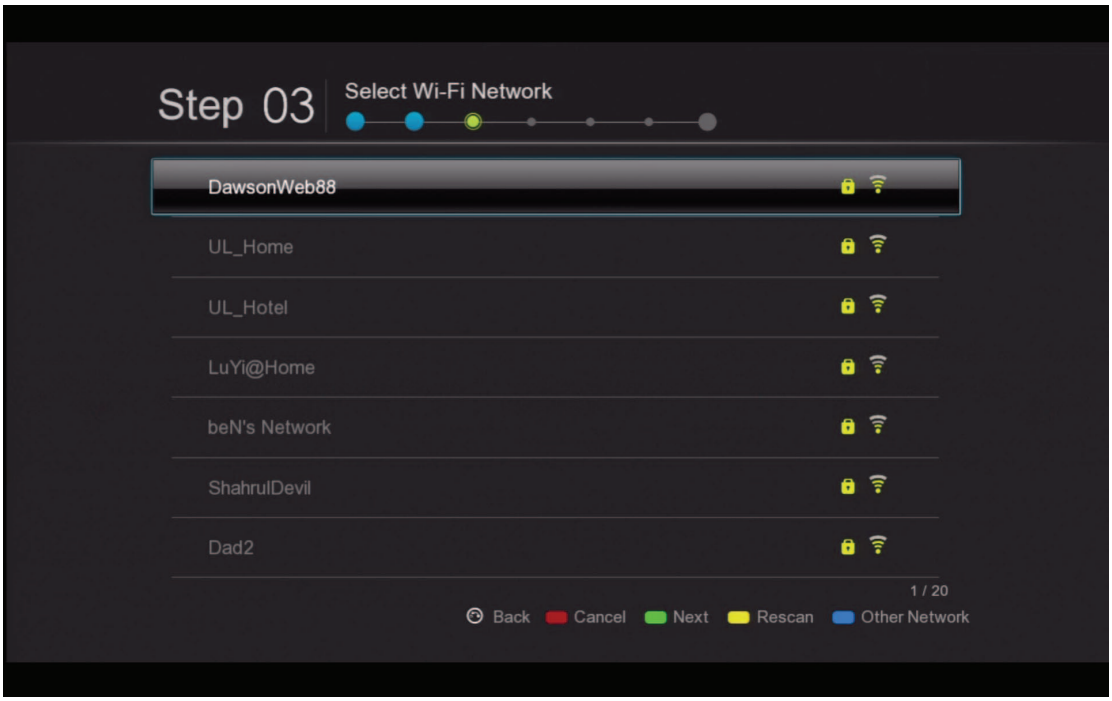

For wireless connection only. Select your SSID listed and press

All Rights Reserved ©

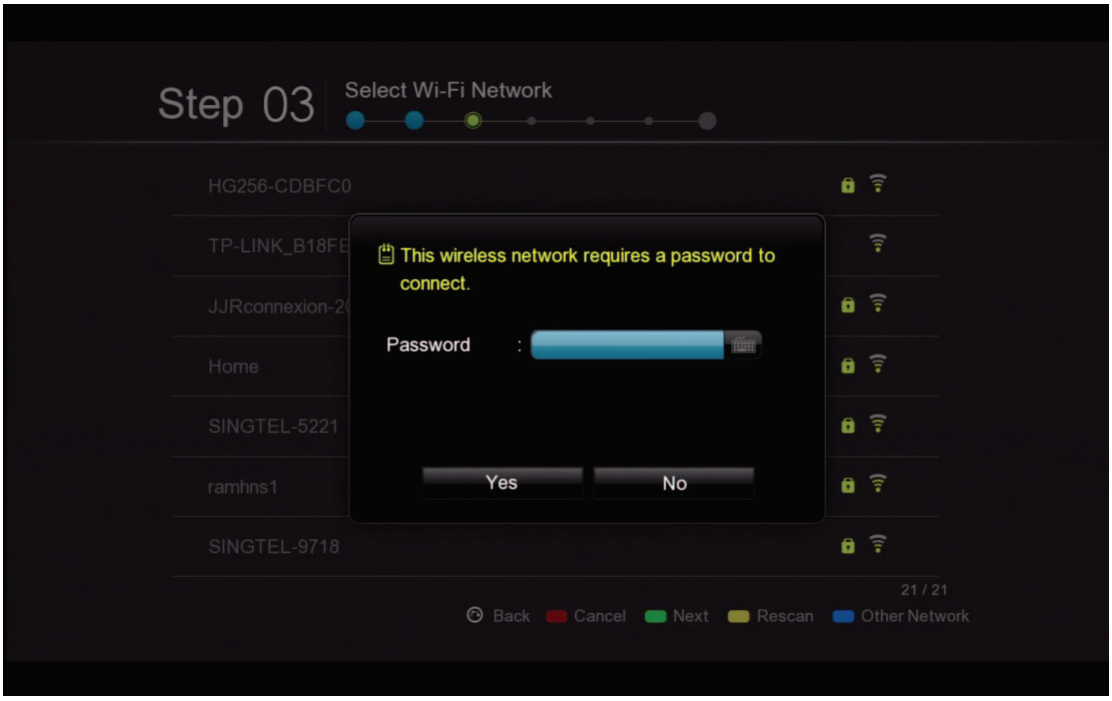

Enter your password for your router for connection.

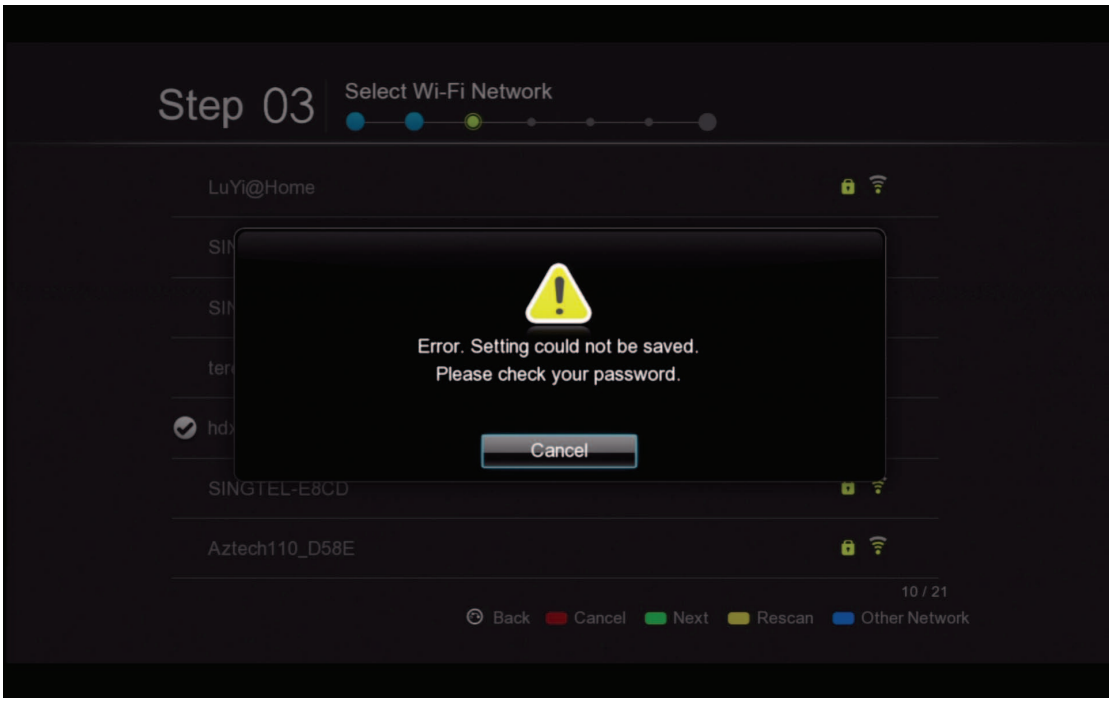

If your password is wrong, an error message will be prompted. Please check your password and re-enter it.

Review your IP settings and press

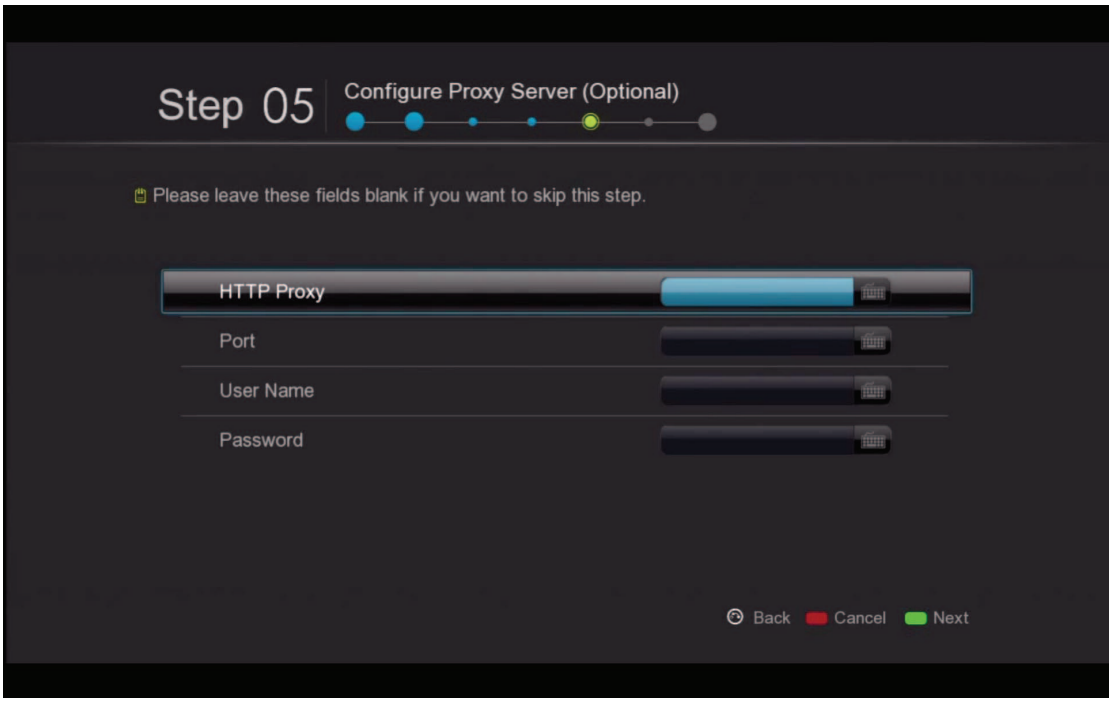

Optional: If you do not have proxy server on your network, you may proceed to next step.

All Rights Reserved ©

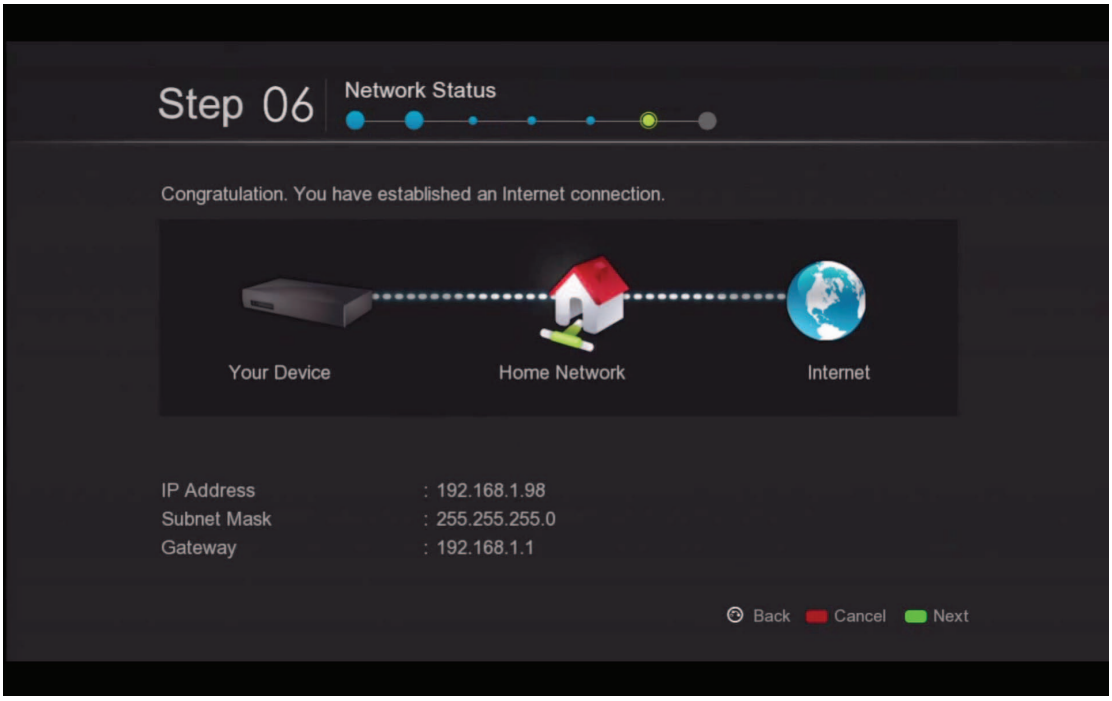

Verify your Internet and network connection. If you received the congratulation prompt, you network setup is completed.

Otherwise, please press to check your settings again.

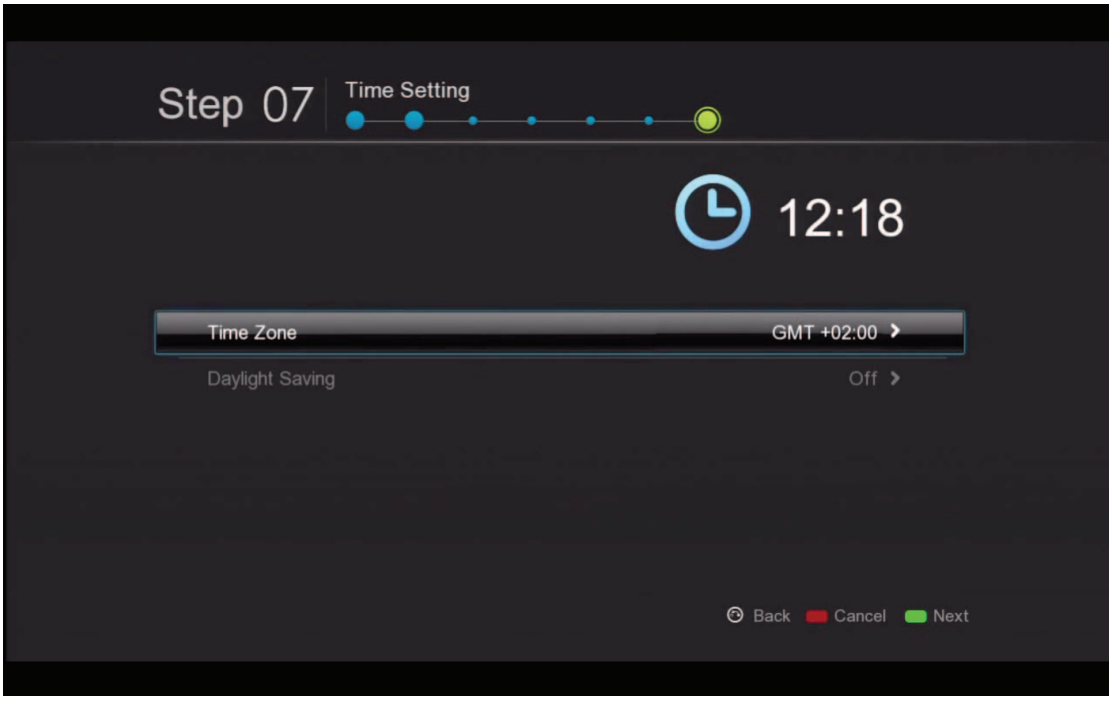

Choose your time-zone and daylight setting. This will affect system timing and the time is reflected on your home screen.

Your set-up is complete. Press to finish and return to the HOME menu.

All Rights Reserved ©

9. Setup

Summary: Advance settings such as video/audio output, color-space, subtitle languages, and parental control can be setup here.

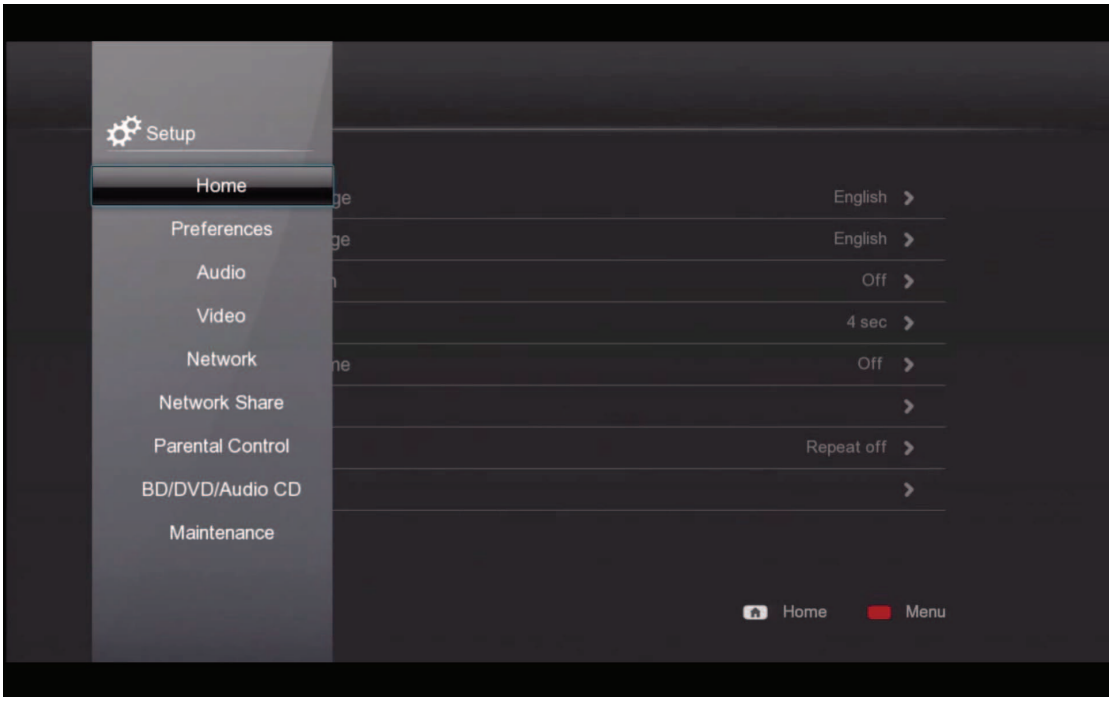

Tips: If you have completed the setup wizard steps, the correspondent settings can be found and update here.

9.1 Setup - Preference

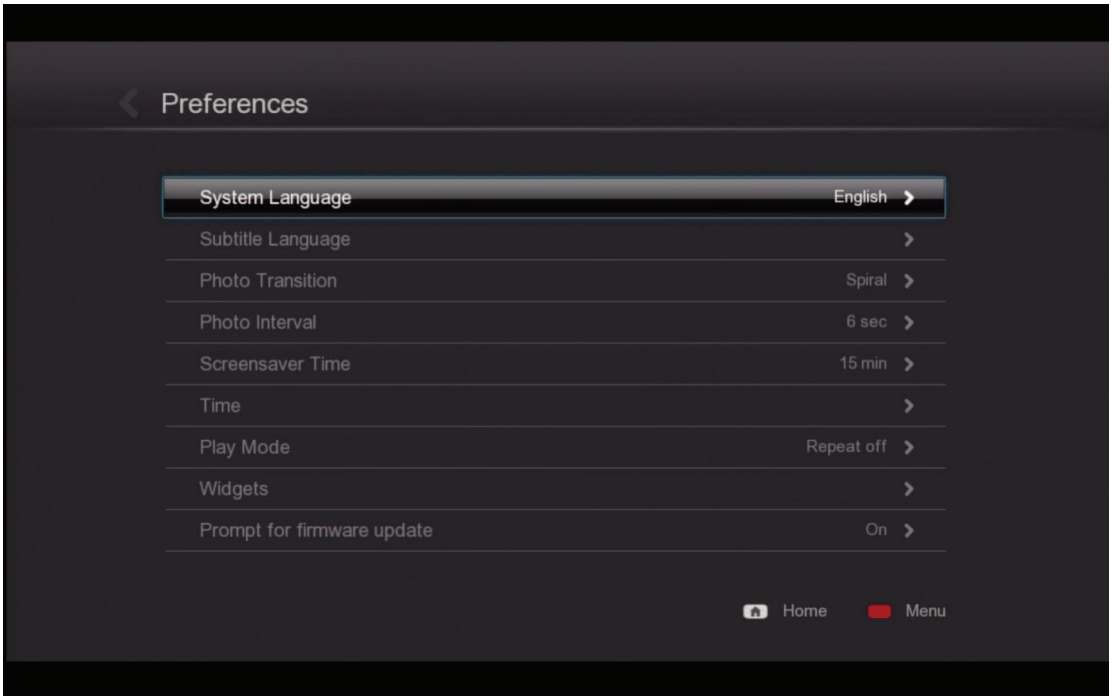

Preference

System Language	User interface language for menu and settings.
Subtitle Language	Subtitle language for movies.
Photo Transition	Preset photo slide show transition style.
Photo Interval	Preset photo slide show interval before showing the next photo.
Screensaver Time	Setup idle time before screensaver activate.
Time	System time and date. Shown on Home menu widget.
Play Mode	Allows you to set the repetition mode of your media during playback
Widgets	Setup your location for weather widget found on Home menu
Prompt for firmware update	Enable or disable automatic checking for firmware updates.

All Rights Reserved ©

9.2 Setup – Audio

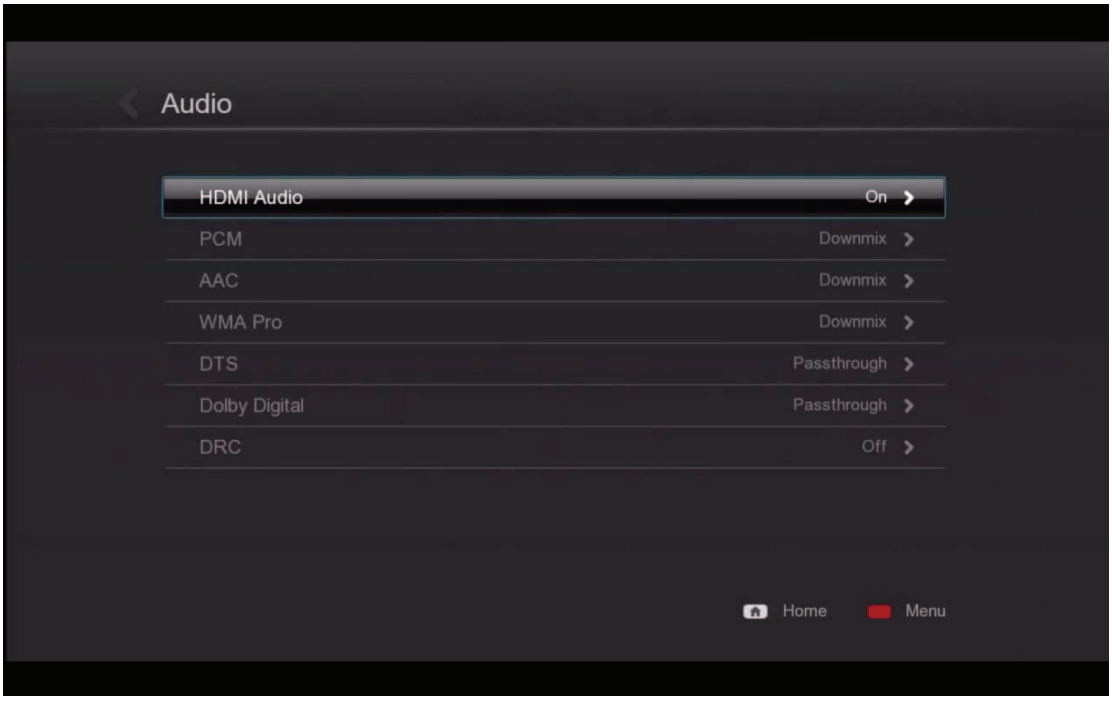

HDMI Audio

ON	Enable audio signal output from HDMI cable connection.
OFF	Disable audio signal output from HDMI cable connection.

Audio Codec

Adjust how you like the media player to decode audio signal or passthrough without decoding.

Audio Codec	Options
PCM	Downmix or Passthrough
AAC	Downmix or Passthrough
WMA Pro	Downmix or Passthrough
DTS	Downmix or Passthrough
Dolby Digital	Downmix or Passthrough

Tips: If you are connecting directly to your TV without going through an external decoder such as AVR, please choose downmix for the media player to handle all audio decoding.

DRC (Dynamic Range Compression)

ON	Automatically reduce sudden loud volume in a movie scene or amplifies dialog or quiet scene when needed.
OFF	Disable

9.3 Setup – Video

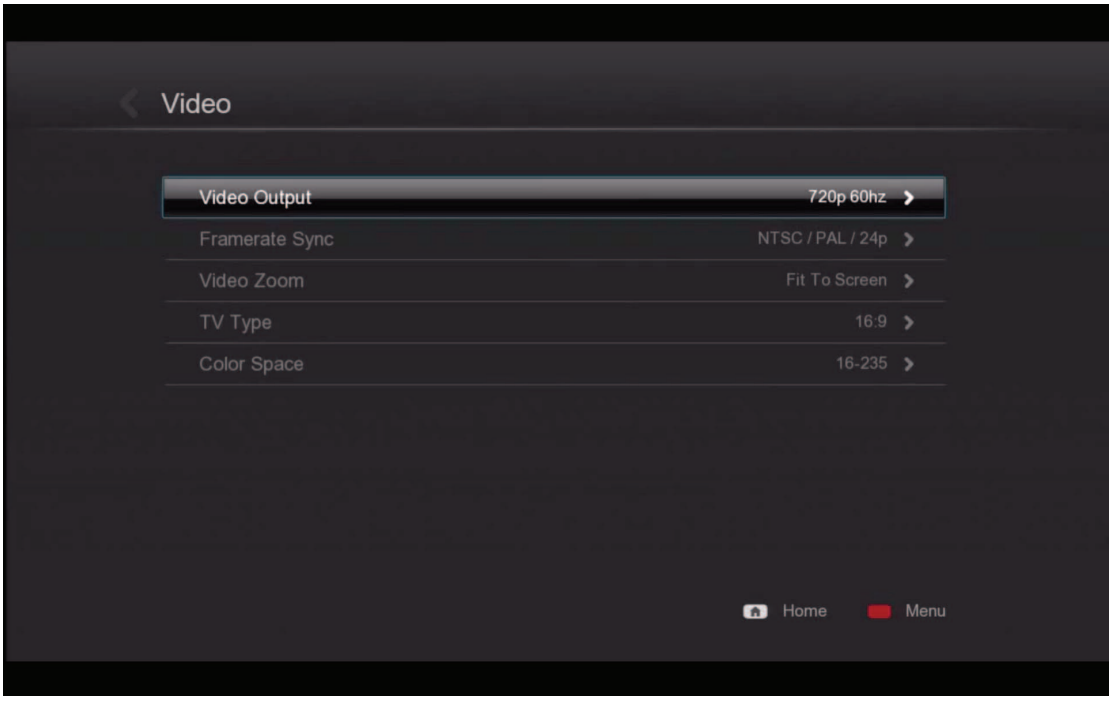

Video Output

You may wish to customize video output according to the specification of your TV. Please check your TV manufacturer specification before optimizing video resolution.

AUTO	System automatically select the most suitable video resolution for your display
NTSC	Composite Output
PAL	Composite Output
High Definition Mode (Component Connection)	720p/50hz, 720p/60hz,
High Definition Mode (HDMI Connection)	720p/50hz, 720p/60hz, 1080i/50hz, 1080i/60hz, 1080p/50hz, 1080p/60hz
1080p/24hz Mode	1080p displayed at 24 frames per second) as a digital mastering format.

Framerate Sync

Reduce video judder by selecting the correct framerate sync according to your TV specification.

All Rights Reserved ©

Video Zoom

Setup how you like the media player to handle your video zoom level.

Actual Size	Disable video zooming.
Fit to screen	
Crop	
Full Screen	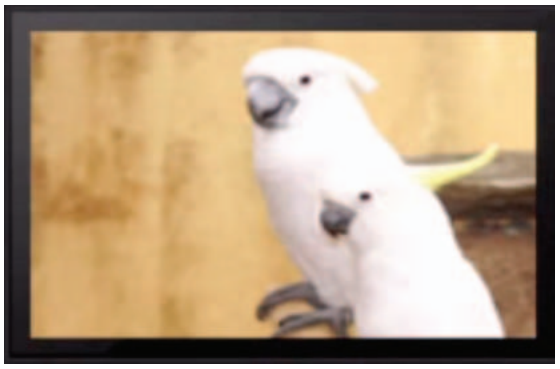

TV Type

Setup your TV or display aspect ratio

4:3	Typically for older TV set which is using CRT technology
16:9	Most High Definition TV uses 16:9, such as LCD/Plasma TV, Full HD Projector
16:10	For widescreen computer display, where typically aspect ratio is 16:10

Color Space

Define color space adjustment according to your TV specification

9.4 Setup – Network (Configure IP

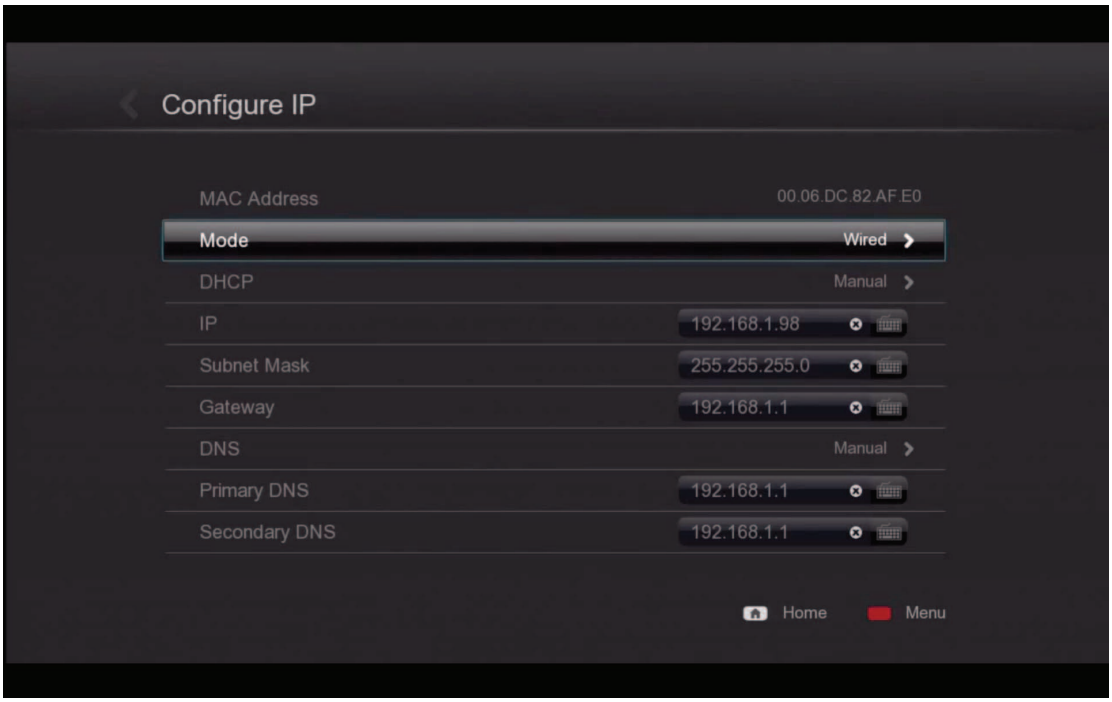

Mac Address

Your unique NIC MAC address, this is needed when engaging support services or trouble shooting.

Mode

Wired	Your media player is connected to the router through a RJ45 network cable
Wireless	Wireless dongle is inserted and network is connected wirelessly

Tips: Wireless is not available when the media player does not detect a compatible wireless dongle.

DHCP

Auto	Automatically resolve IP address from your router. Your router must be configured to enable DHCP.
Manual	Manual input IP address

IP Address and DNS

No input or modification is required if you have setup your DHCP as auto, your router would provide all the information.

All Rights Reserved ©

9.5 Setup - Network Share

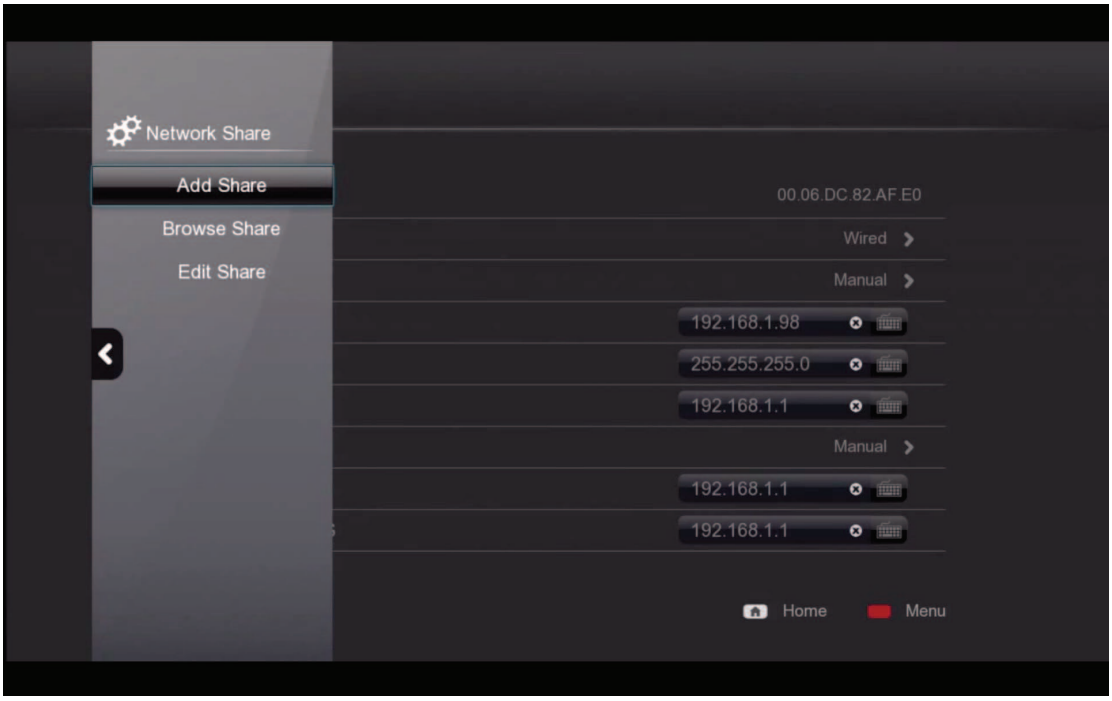

Network share folder added here is accessible from network in home menu.

Add Share
Manually add network share folders from your PC/MAC or NAS.

Browse Share
Browse through a list of available share folders using the media player, this allows you to quickly add share folder without manually entering IP address and folder name.

Edit Share
Remove or edit existing share folder information.

9.5.1 Add Share

Protocol

Samba	Most share folder in Windows PC or NAS uses Samba network protocol.
NFS	NFS protocol offer faster network transfer bitrate however not every device support it. Please check your network settings on your sharing devices.
NFS TCP	NFS over TCP/IP transport.

Share folder location

IP/Host Name	Enter the IP address or host name of the device that you are connecting.
Share Folder	The name of the folder that you have granted sharing access.
Share Name	You may define any Name for the share folder that will be use for the media player.
Username	If password is enable, please input your username.
Password	If password is enable, please input your password.

All Rights Reserved ©

9.5.2 Browse Share

1. Choose the network group where you like the add share folder from.

2. Select the folder, from which you like to add.

3. All necessary information is automatically added for you. Please remember to add your username or password for the share folder.

9.5.3 Edit Share

1. Choose the share folder that you want to edit or remove

All Rights Reserved ©

9.6 Setup – Parental Control

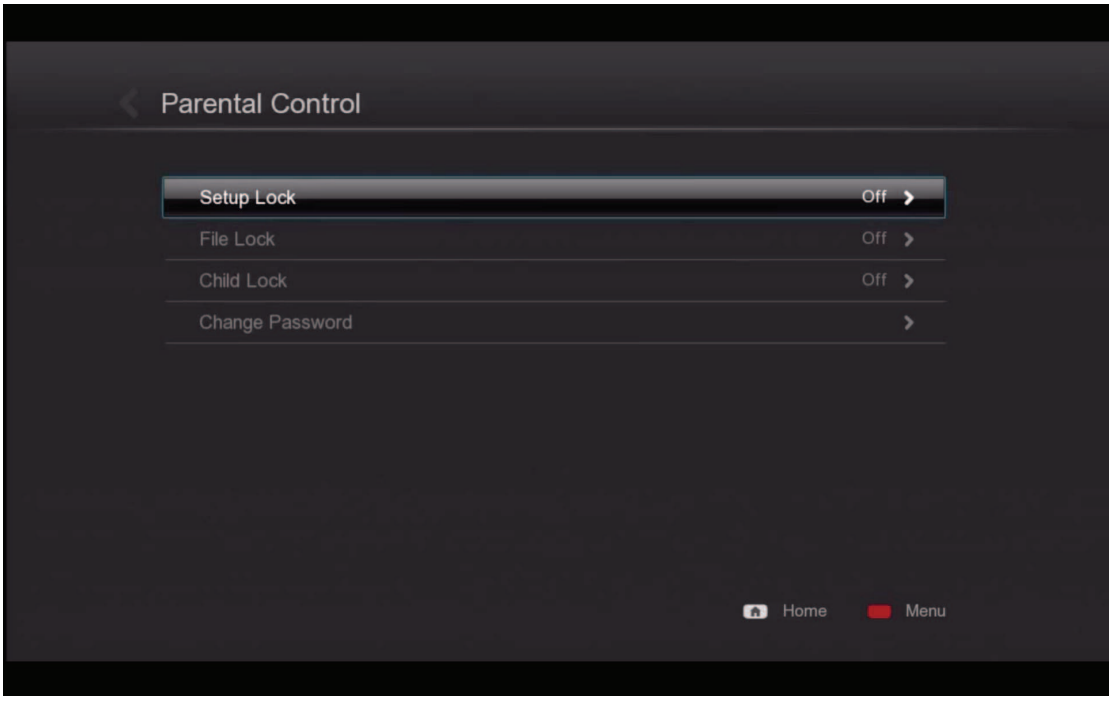

Setup Lock

OFF	By Default
ON	Lock setup page to prevent unauthorized access

File Lock

OFF	By Default
ON	Lock setup page to prevent unauthorized access

Child Lock – For more information, please refer to your local movies ratings.

OFF	By Defaul, allow all access
Kid Safe	General Audiences. All Ages Admitted
G/TV-Y/TV-Y7/TV-G	General Audiences. All Ages Admitted
PG/TV-PG	Parental Guidance Suggested. Some Material May Not Be Suitable For Children.
PG-13/ TV-14	Parents Strongly Cautioned. Some Material May Be Inappropriate For Children Under 13.
PG-15	Parents Strongly Cautioned. Some Material May Be Inappropriate For Children Under 15.
R	Restricted. Children Under 17 Require Accompanying Parent or Adult
NC-17	No One 17 and Under Admitted
Adult	Adult Movie

Change Password

Apply child lock password, enter password to gain access to contents.

9.7 BD/DVD/Audio CD

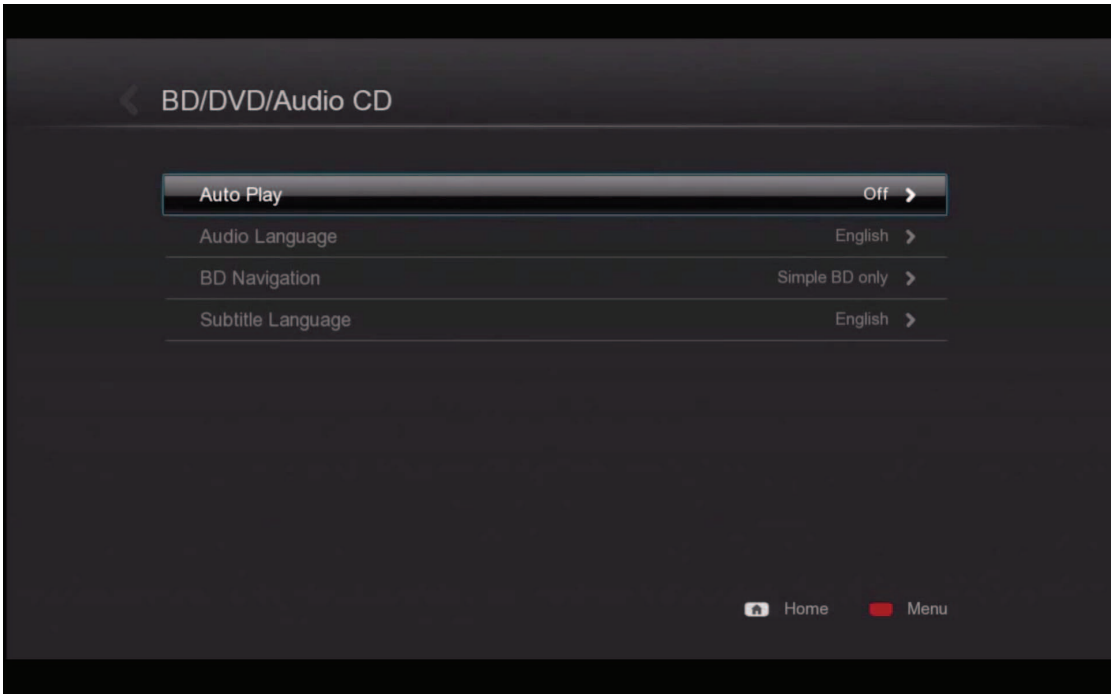

Auto Play

OFF	By Default
ON	Automatically playback when external optical disc detected.

Tips: Require external optical devices, Popbox V8 does not support commercial Bluray disc.

Audio Language

Pre-select default language for BD contents

BD Navigation

Popbox V8 only supports SimpleBD Navigation

Subtitle Language

Pre-select default subtitle language for BD contents

All Rights Reserved ©

9.8 Setup – Maintenance

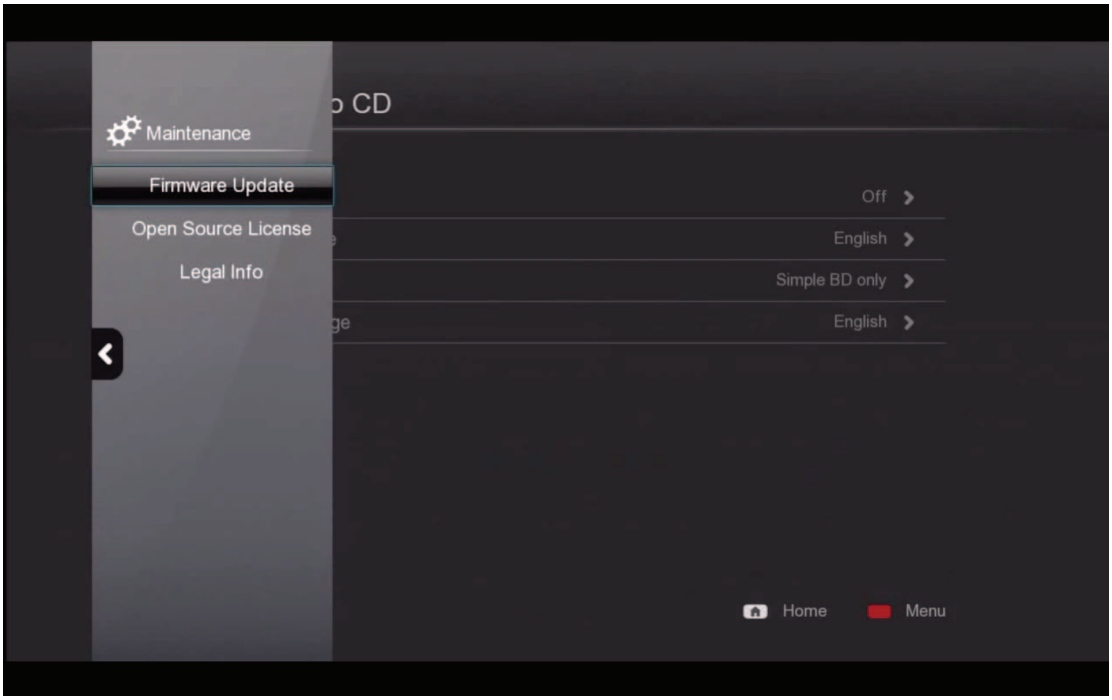

Firmware Update

Check here periodically for free firmware update. By updating your firmware, you can be sure that your media player is always up to date with the latest technology and bug fixes.

Open Source License

In accordance with GPL, a list of open source licenses that the device uses.

Legal Info

Information on legal liability

9.8.1 – Firmware Update

Important: Please reboot your device by cycling the power outlet, this ensure that your device is ready for firmware updating.

Firmware Version
Your current firmware version, changes accordingly to the current public release firmware

Kernel Version
System kernel version

Check for Firmware Update (Online)
Ensure that you are connected to the Internet before proceeding, during firmware update. Press enter on your remote to proceed, follow on-screen instruction. please DO NOT power down your device. It may render your device useless.

Tips: Popbox V8 supports offline firmware updating. Please visit our support website for more information.

Reset to Factory Setting
If you ever need to reset all your settings, this is where you need to enter.

All Rights Reserved ©

10. Apps Market

Summary: A TV apps market place for free and premium apps for your TV. Access instant video on demand service, online radio station, social networking, games and much more.

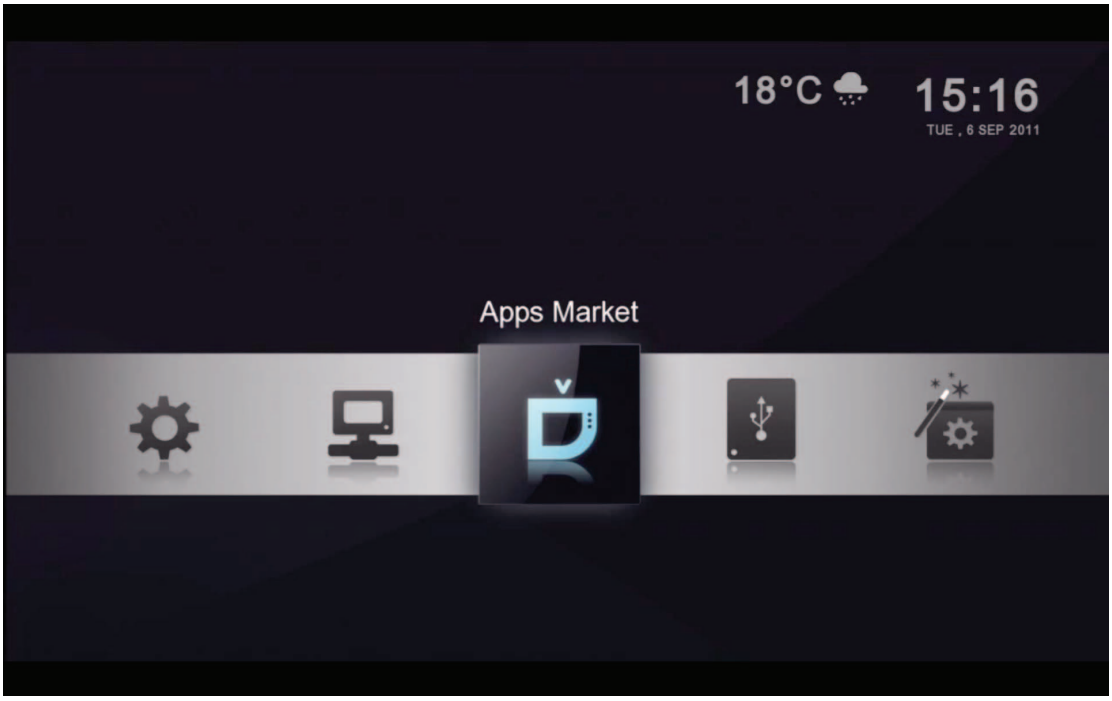

1. Navigate to the Apps Market Icon and press ENTER on your remote.

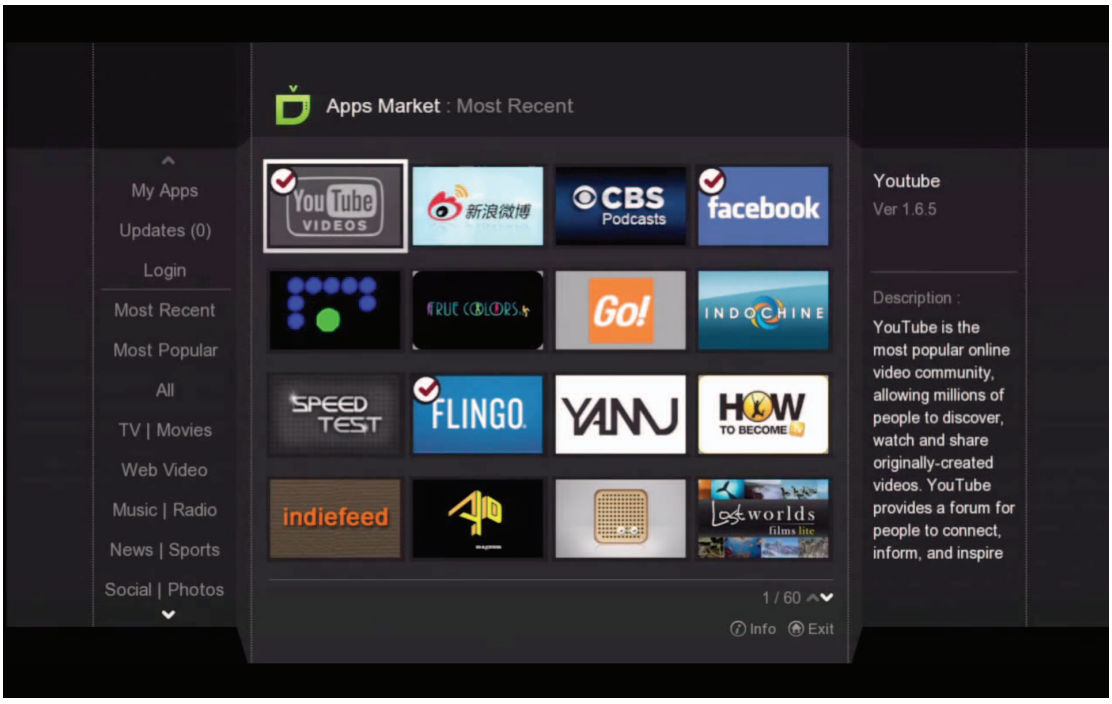

1. Choose your desired app and press ENTER on your remote.

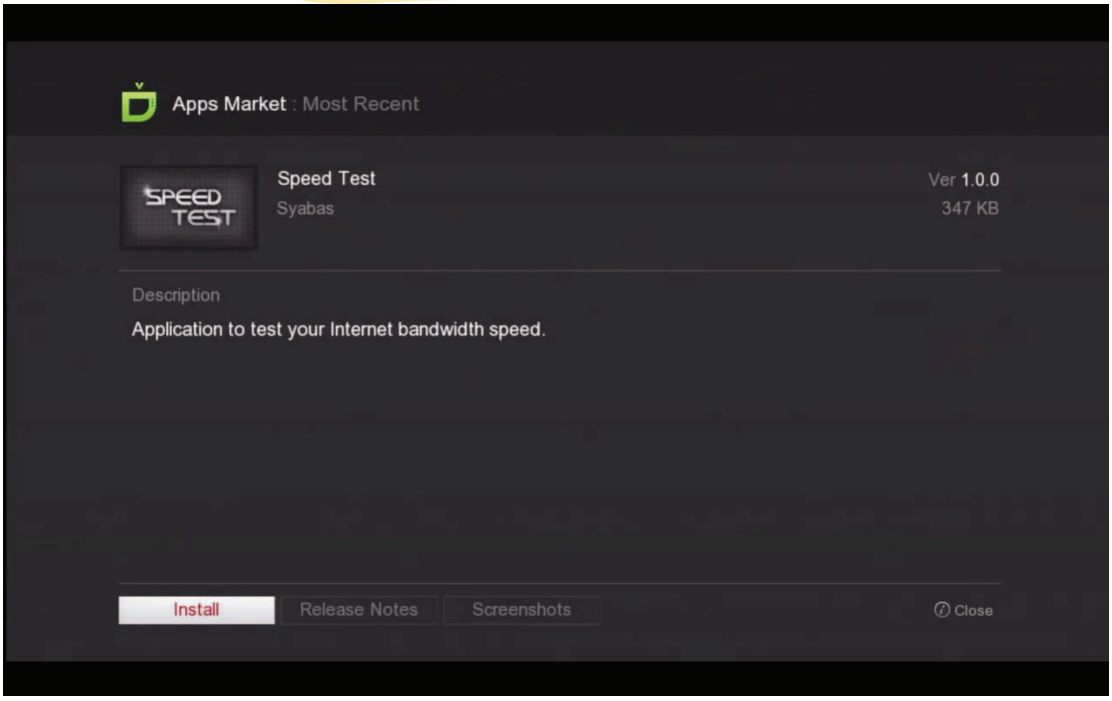

3. Install by pressing ENTER on your remote or exit by press (INFO).

4. The install apps will appear in My Apps category.

Tips: To uninstall any apps, press (INFO) on your remote

All Rights Reserved ©

10.1 Login to Apps Market

Summary: Login to Apps Market to purchase premium apps or access private store provided by your content provider.

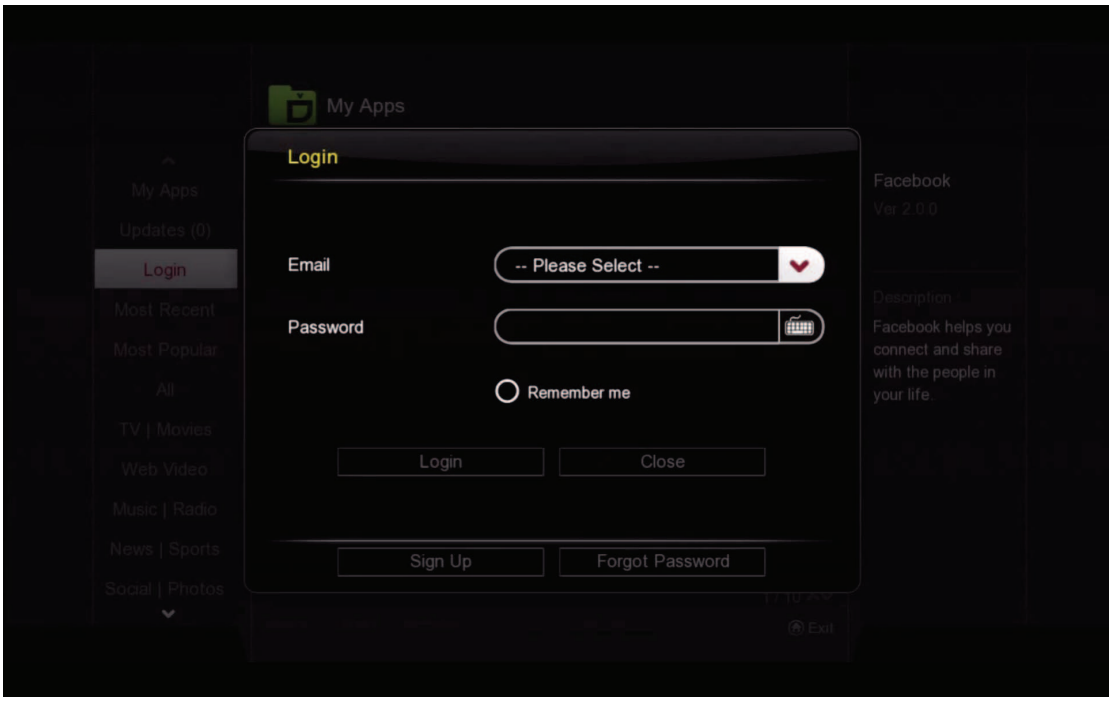

1. On the left navigation pane, choose LOGIN.
2. If you already have an account, please enter your email address and password.
3. Otherwise, move down to SIGN UP and create your Apps Market account.

Tips: If you cannot locate your premium content, please ensure that you are logged in to the Apps Market.

11. File Browser

Summary: Depending on where your files are located, access the appropriate feature of the media player to playback your files. Choose how you like your media to be presented or manage your files with the built-in file manager.

Network	Browse your network shared folder with the network option, any shared folder found on your network is visible. Password will be prompted if they are protected.
Local Media	Browse your media files stored in your external connected USB device, such as portable HDD, USB Thumbdrive, and optical device.

11.1 File browser view mode

The file browser is the user interface that you access and interact with your media files. There are many features within the file browser, please take some time to get yourself familiarize with it.

There are 2 mode of file browsing.

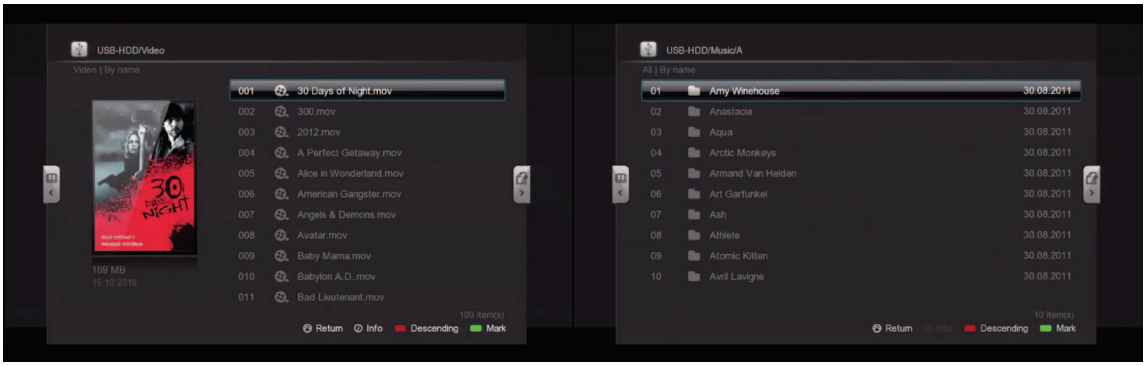

We will go into detail, later in this chapter.

All Rights Reserved ©

11.2 File Browser Settings

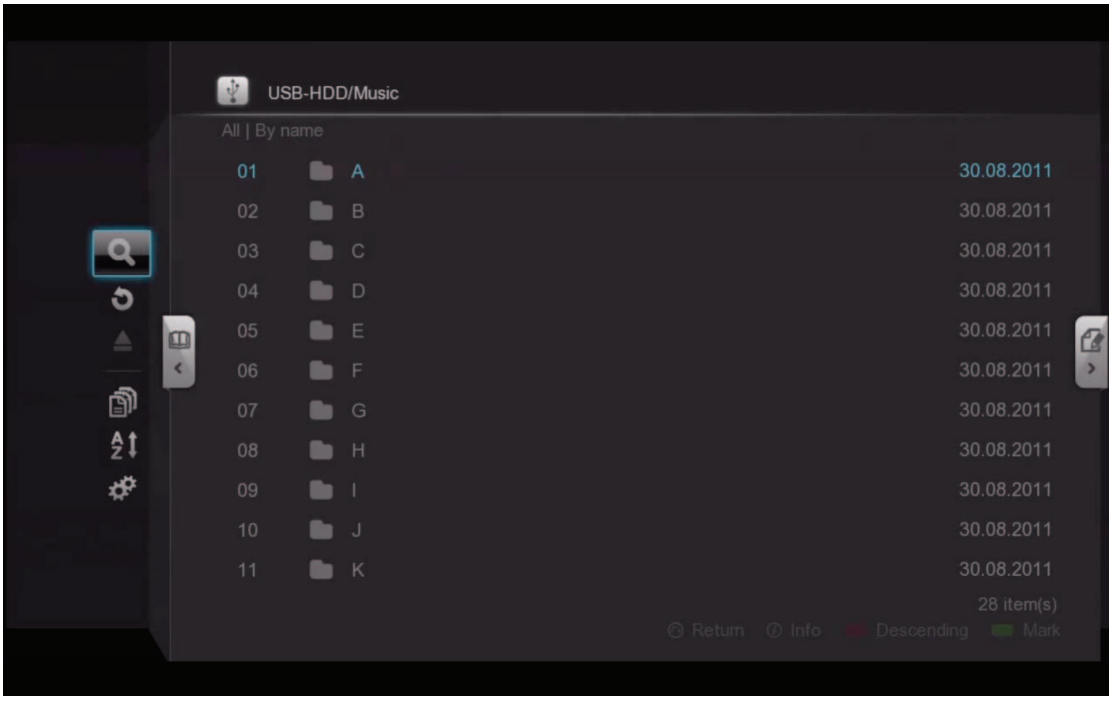

1. In the file browser, press the LEFT arrow on your D-pad to bring up the menu options.

Search	Search for your favorite movie by entering the title.
Return	Return to file browser.
Eject	Safely remove USB connected devices such as USB thumbdrive.
Filter	Filter media type, movie, music or photo
Sort	Sort by Name, Date or Size
Settings	Setup your file browser

Tips: The file browser behaves exactly the same in local media or network folder mode.

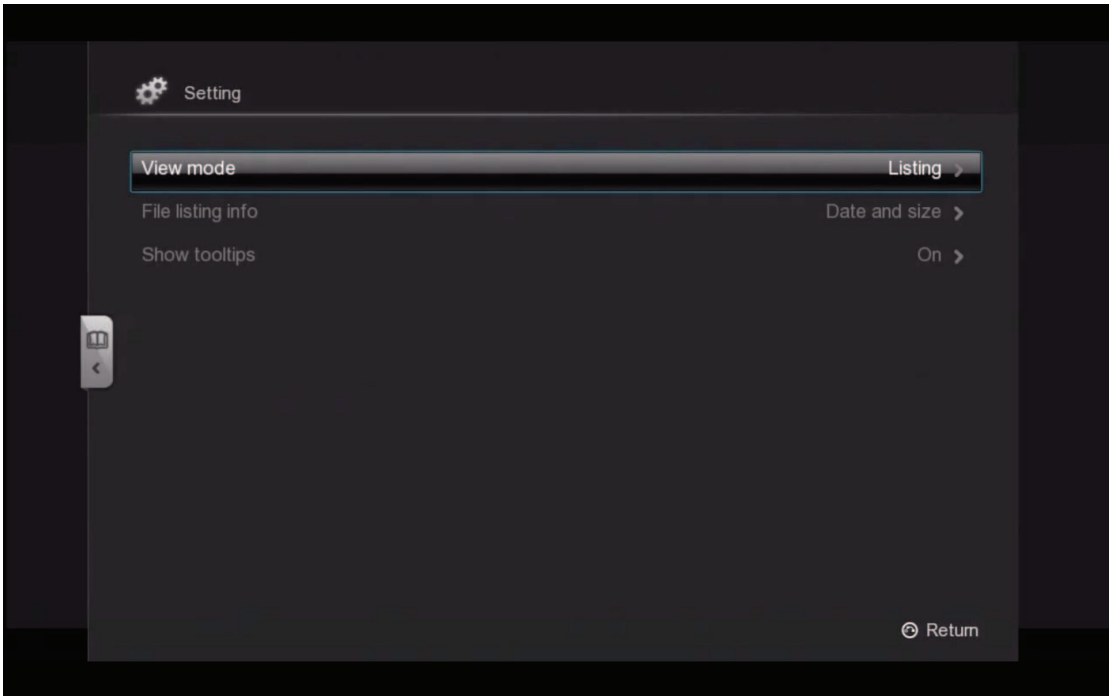

View Mode

Listing	Traditional file listing mode
Thumbnail	A cover-art thumbnail appears on the left of the movie or song titles.

File Listing Info

None	Disable date and size information display during file listing.
Auto	System will display or hide.
Size Only	Display File Size only.
Date Only	Display File modified date only.
Date and Size	Display date and size info together.

Show Tooltips

On	Enable hint prompt whenever a tool is highlighted
Off	Disable

All Rights Reserved ©

11.3 File Manager

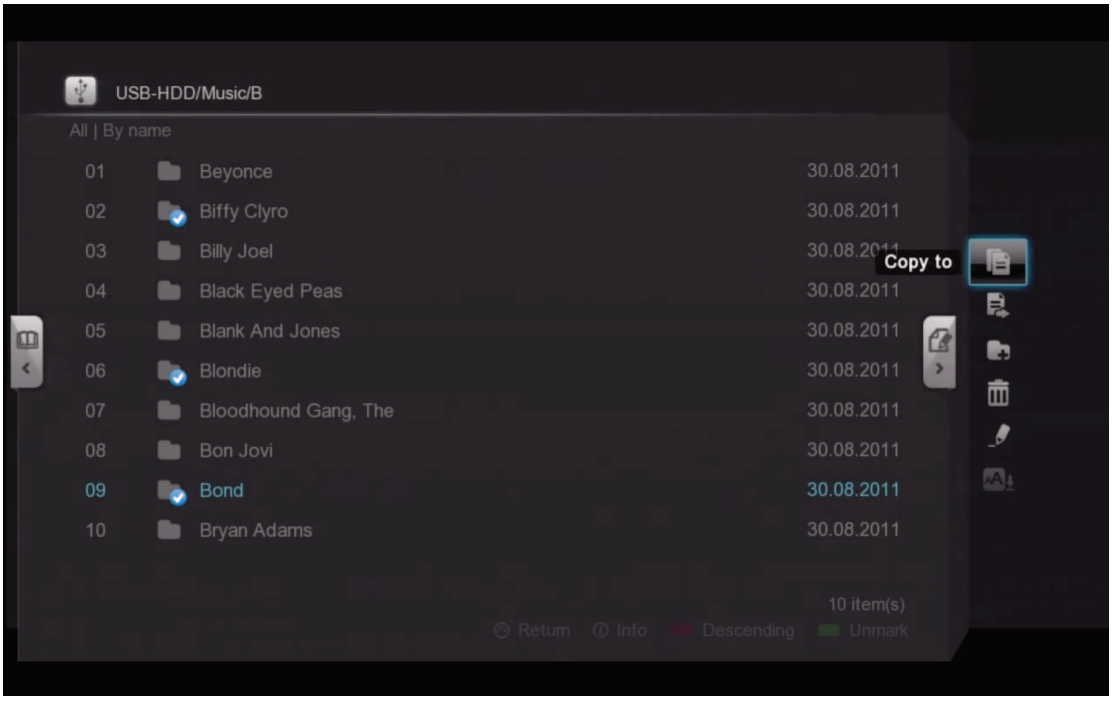

1. Mark the files that you want to copy/move/delete by pressing (Green) . A tick is visible on the filename to indicate that it is marked.
2. Press (RIGHT) on the D-pad to access the file manager menu.

Copy To	Copy or duplicate marked file to a different folder.
Move To	Move marked file to a different folder.
Create a new folder	Create a new folder.
Delete	Delete marked file or folder.
Rename	Rename marked file.
Fetch Online Subtitle	Download subtitle for marked file. Only applicable to video.

Tips: Make sure that the destination folder or drive is not copy-protected.

12. Movie Meta Data

Summary: One of the main features of Popbox V8 is the ability to download and manage movie meta data without the use of a PC.

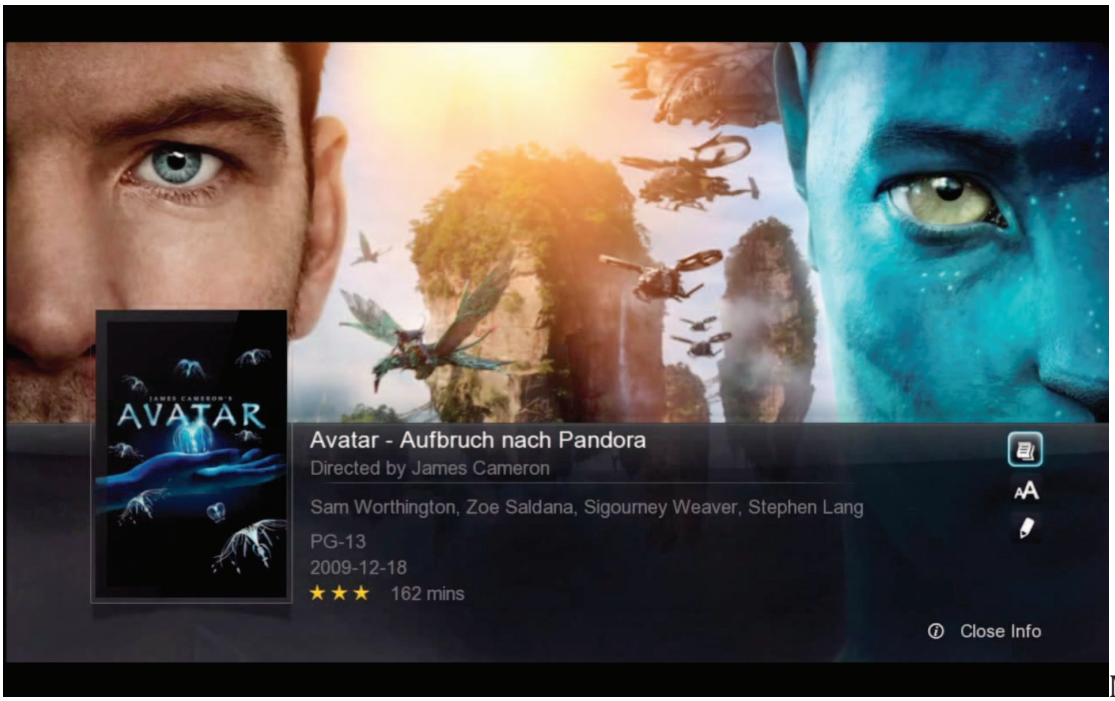

Movie Synopsis

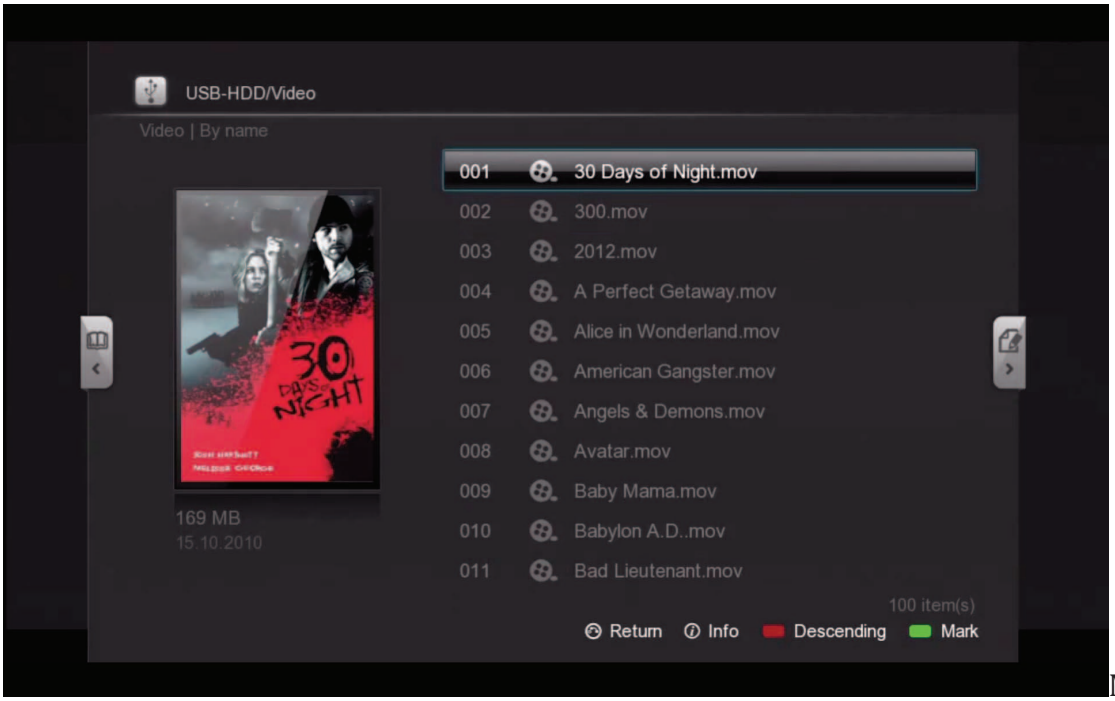

Movie Thumbnail

Tips: Enable thumbnail view by going to file browser settings. See page 37.

12.1 Movie Info Page Walk-through

Press (INFO) on your remote to bring up the movie info page.

All Rights Reserved ©

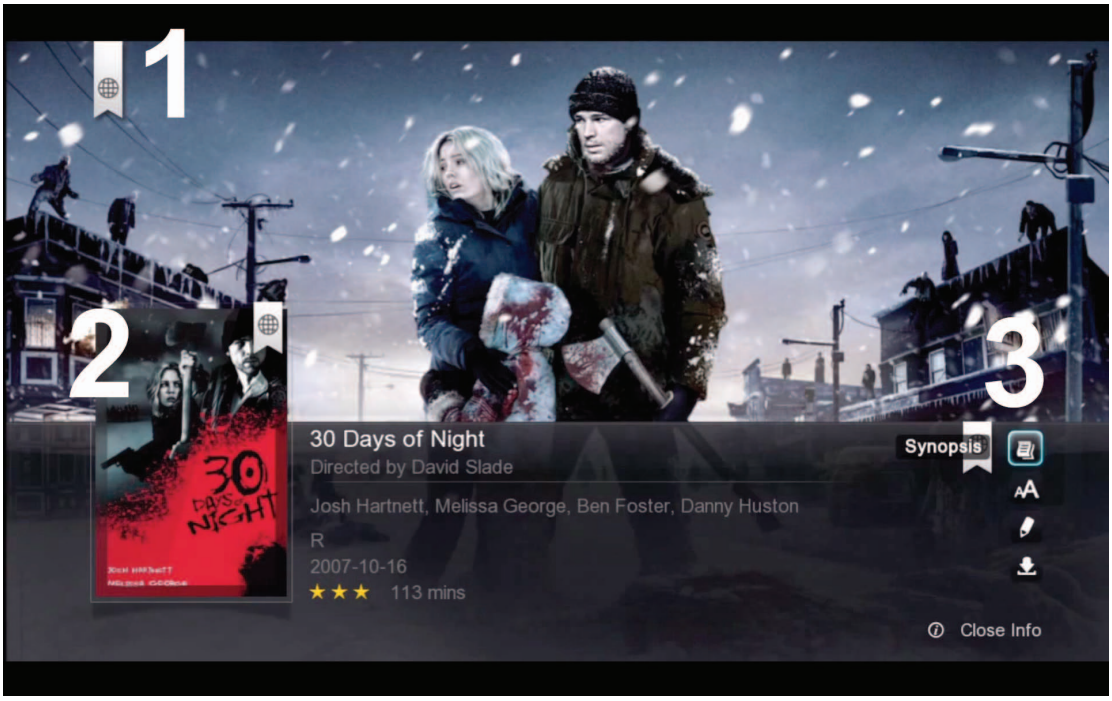

1. Movie Fan-Art
2. Movie Poster or thumbnail
3. 4 options are available here.

Synopsis	Movie synopsis gives you an overview of the movie. Including parental ratings, casts, director etc.
Fetch Online Subtitle	Download subtitles for your movie directly without PC. Supports multi-languages.
Edit	If the automatic selected meta-data are wrong or you wish to change the cover-art or thumbnail you may edit it real-time.
Download	After you have confirmed the meta-data and cover-art. Download to save it on your disc or network folder

12.2 Download Movie Thumbnail and Meta-Data

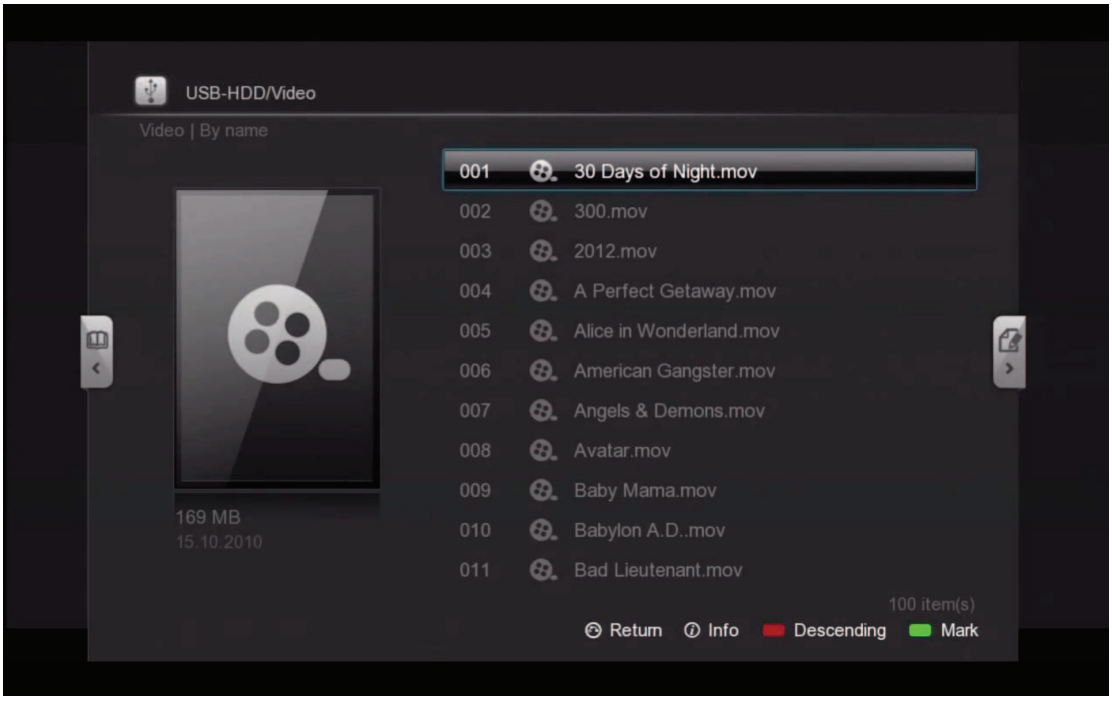

1. On file browser, highlight the movie that you want to download thumbnail.
2. Press (INFO) on your remote

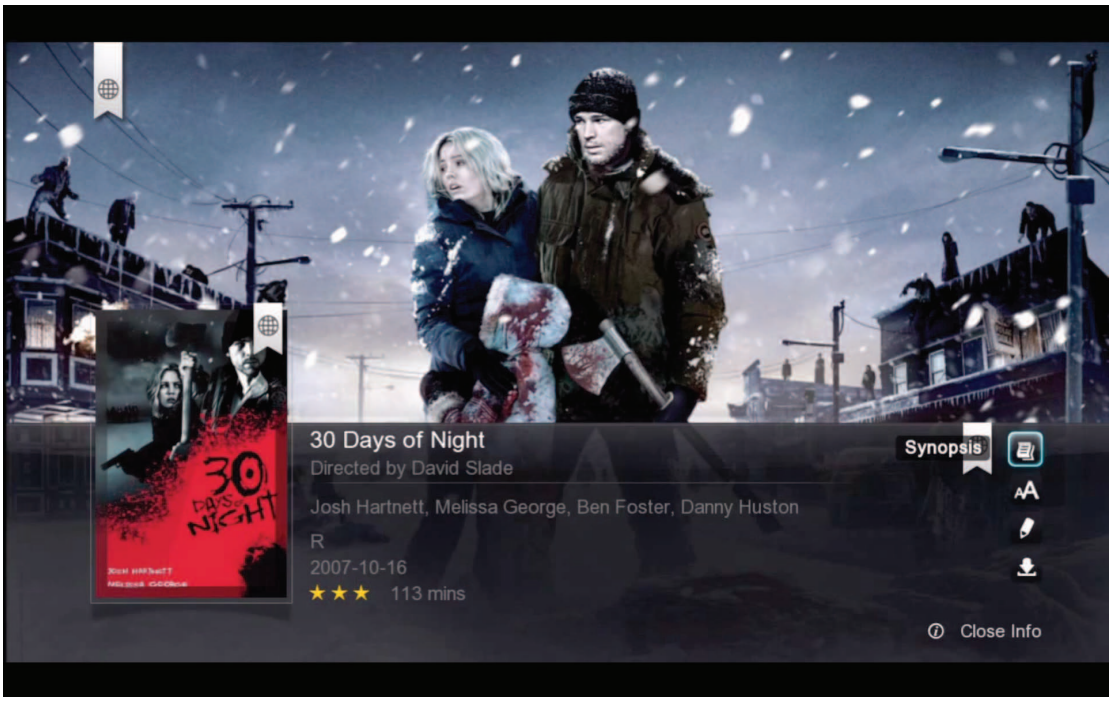

3. Fan art and synopsis are automatically presented in this format.

All Rights Reserved ©

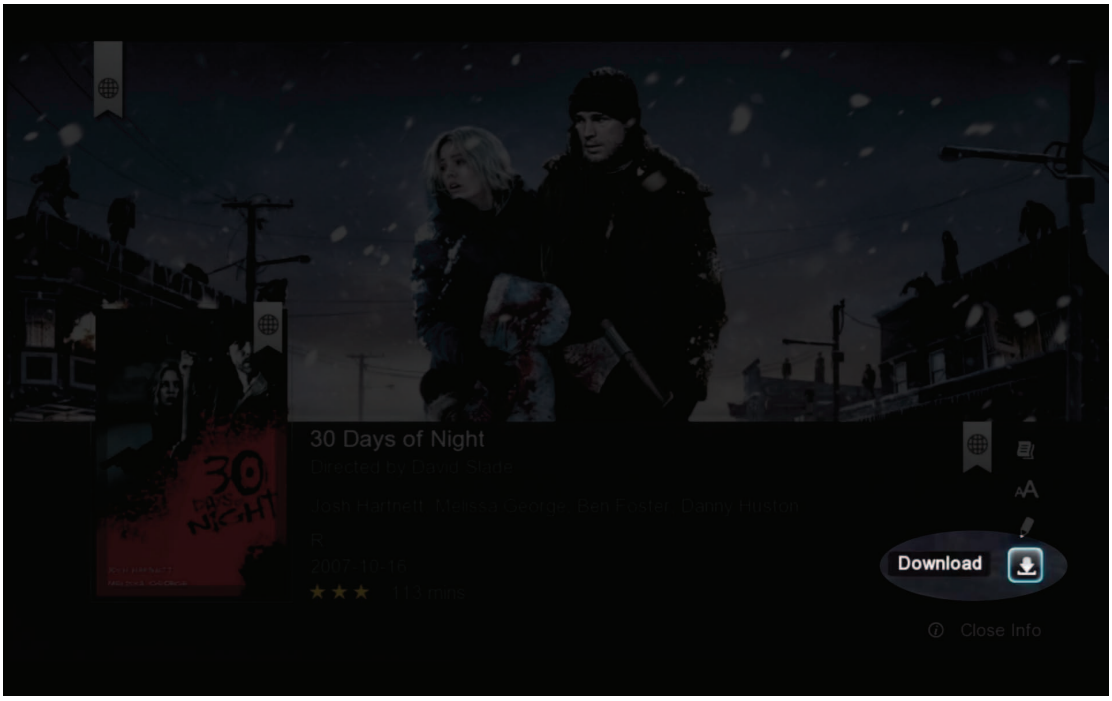

4. Navigate to **Download** and press ENTER
5. The meta-data and thumbnails are downloaded and saved in the same destination of your movie folder.

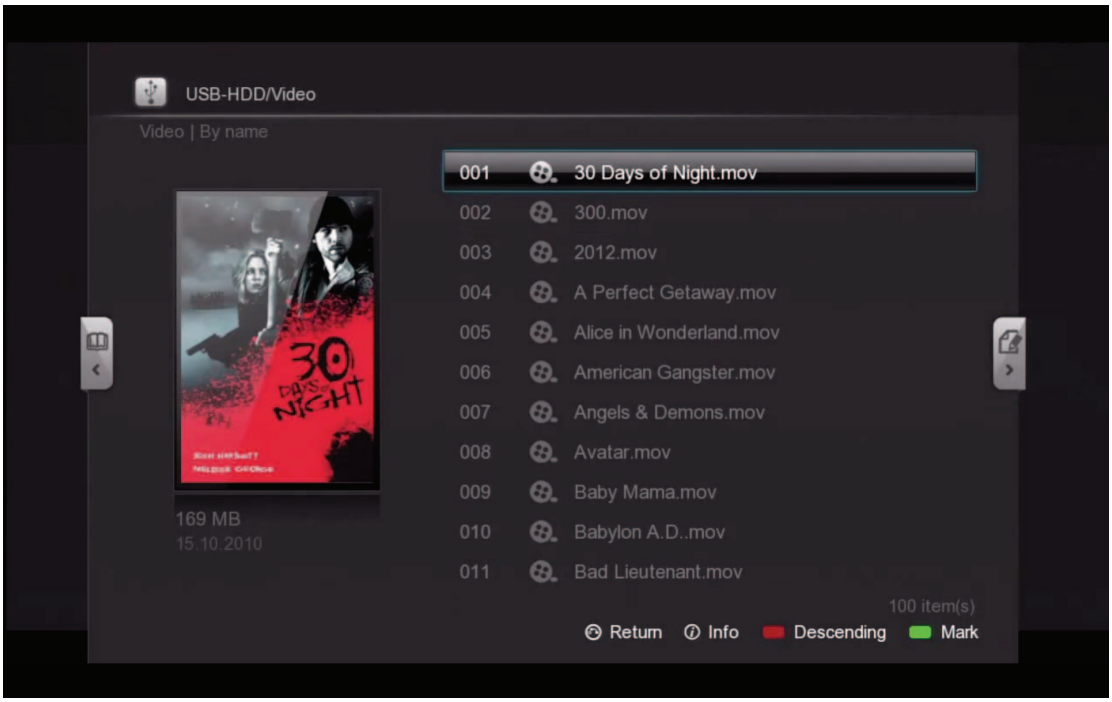

6. Repeat the process for the rest of your movies.

Tips: You may choose different thumbnails for your movie, which is describe in page.

12.3 Edit or Update Movie Information

Change your poster or cover-art by editing the movie meta data.

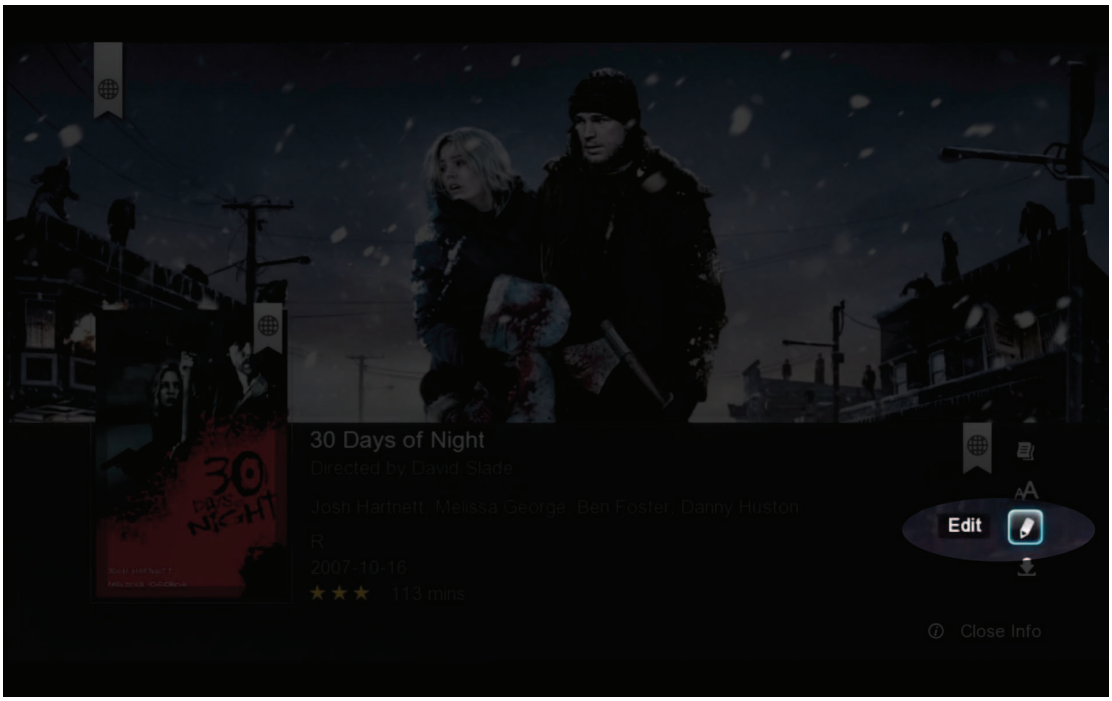

1. Navigate to **Edit** and press ENTER

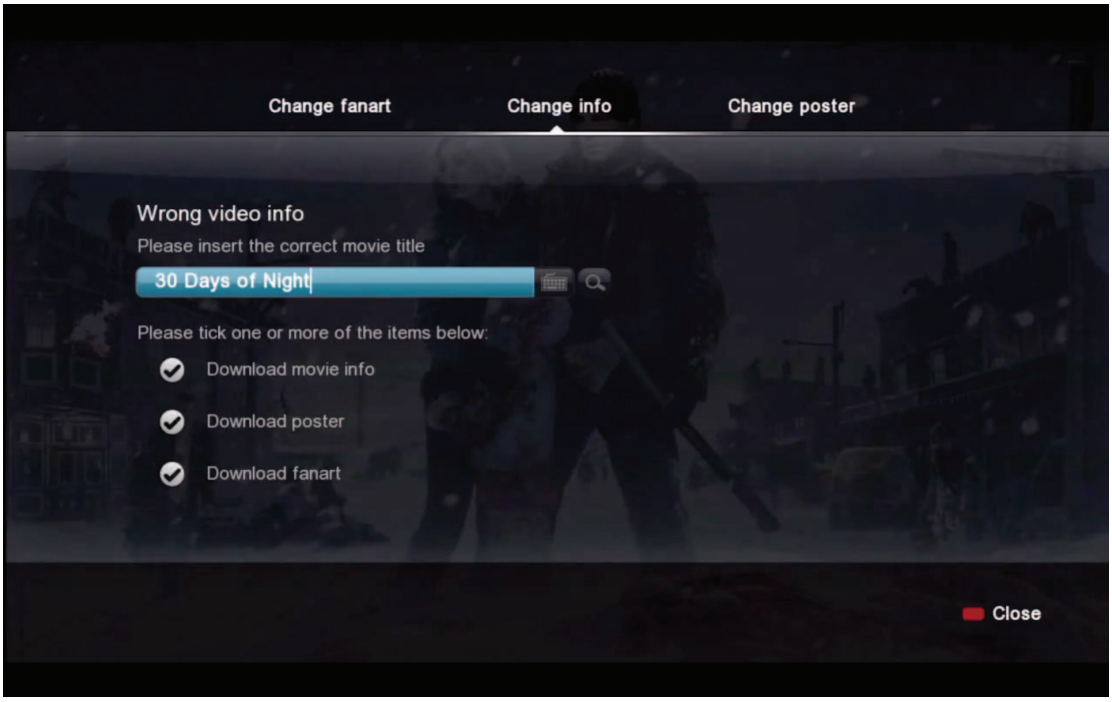

2. Edit the movie title and press ENTER on the SEARCH icon.

All Rights Reserved ©

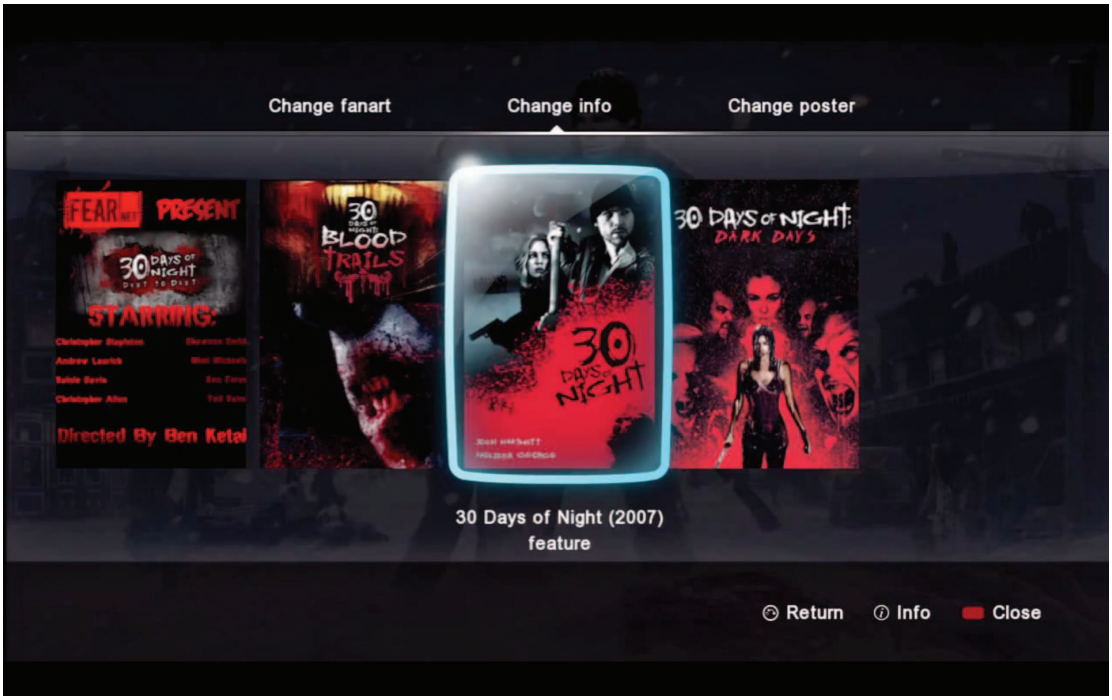

3. Choose the correct poster for your movie (This is not the thumbnail selection)

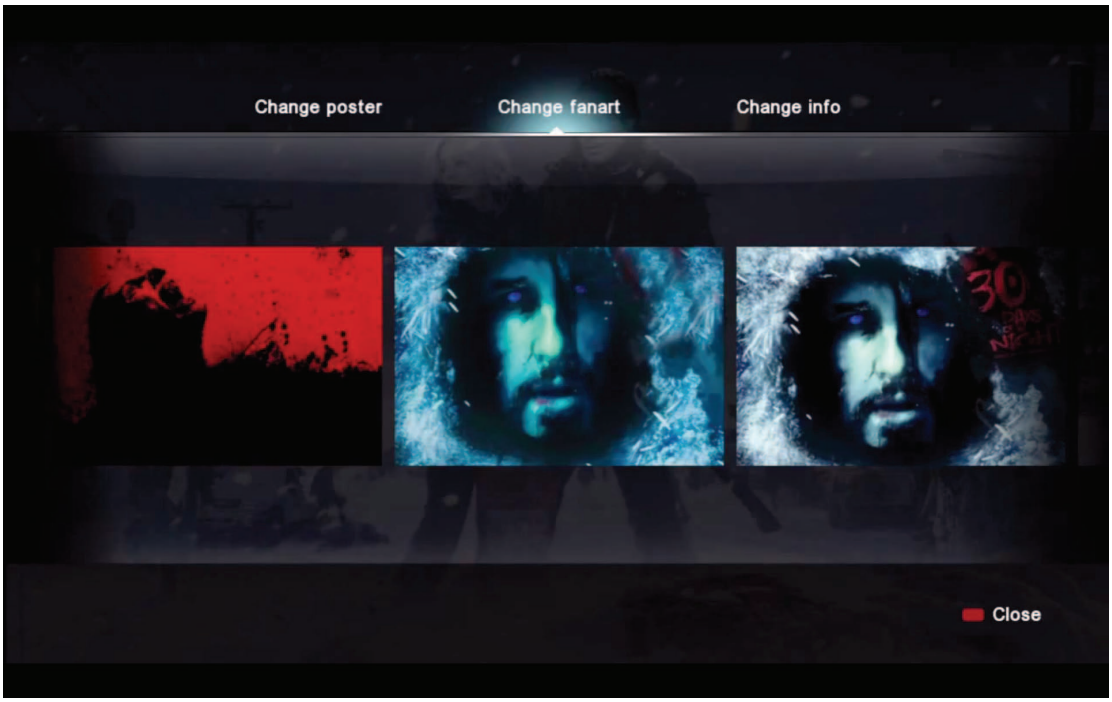

4. Choose your desired fanart

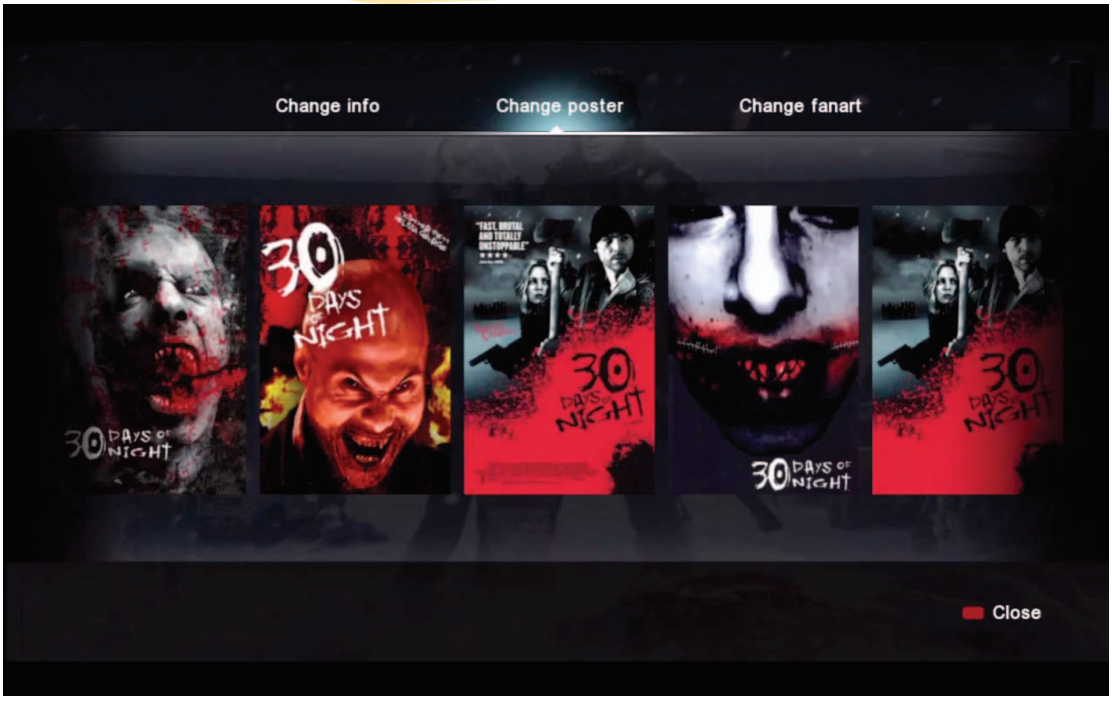

5. Choose your desired movie poster.
6. Please remember to download the new meta-data to save changes.

Tips: In order to download meta-data, you must have a establish internet connection.

All Rights Reserved ©

12.4 Download subtitles

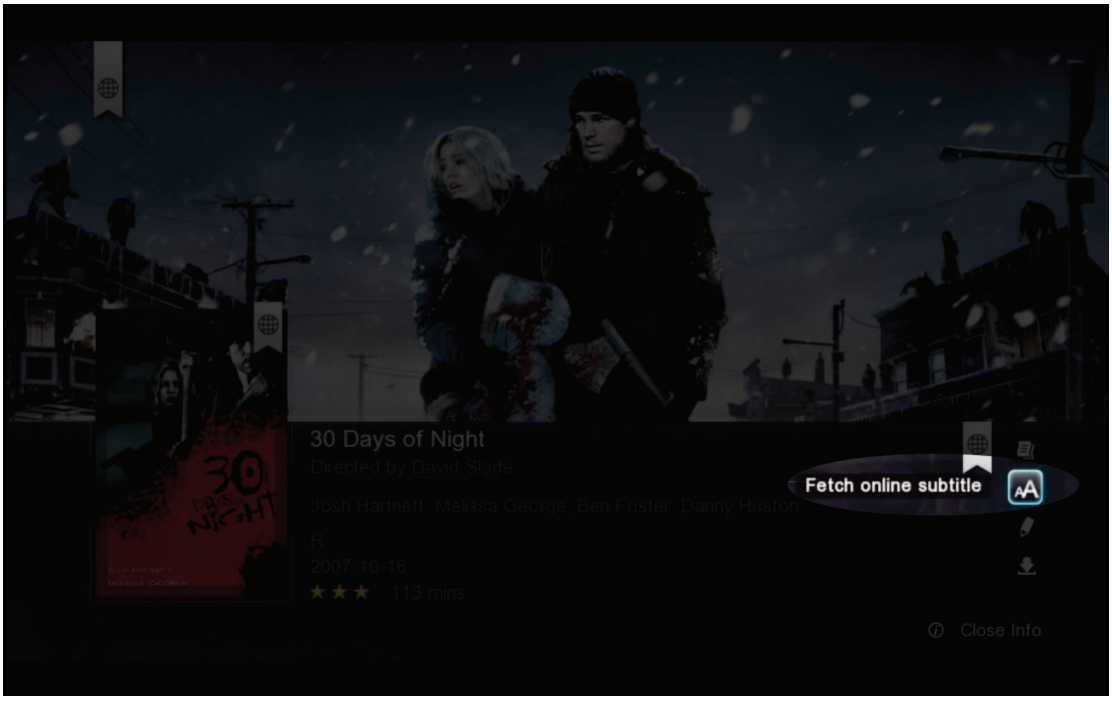

1. On movie info page, navigate to **Fetch online subtitle** and press ENTER

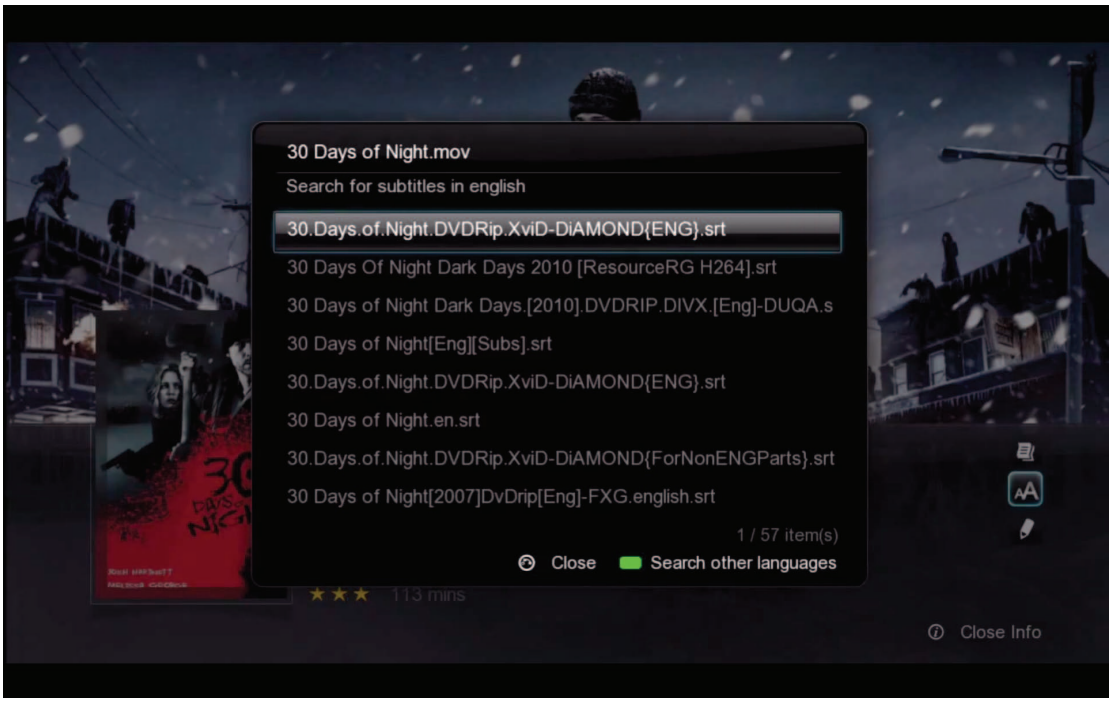

2. Choose the subtitle that best suit your movie.

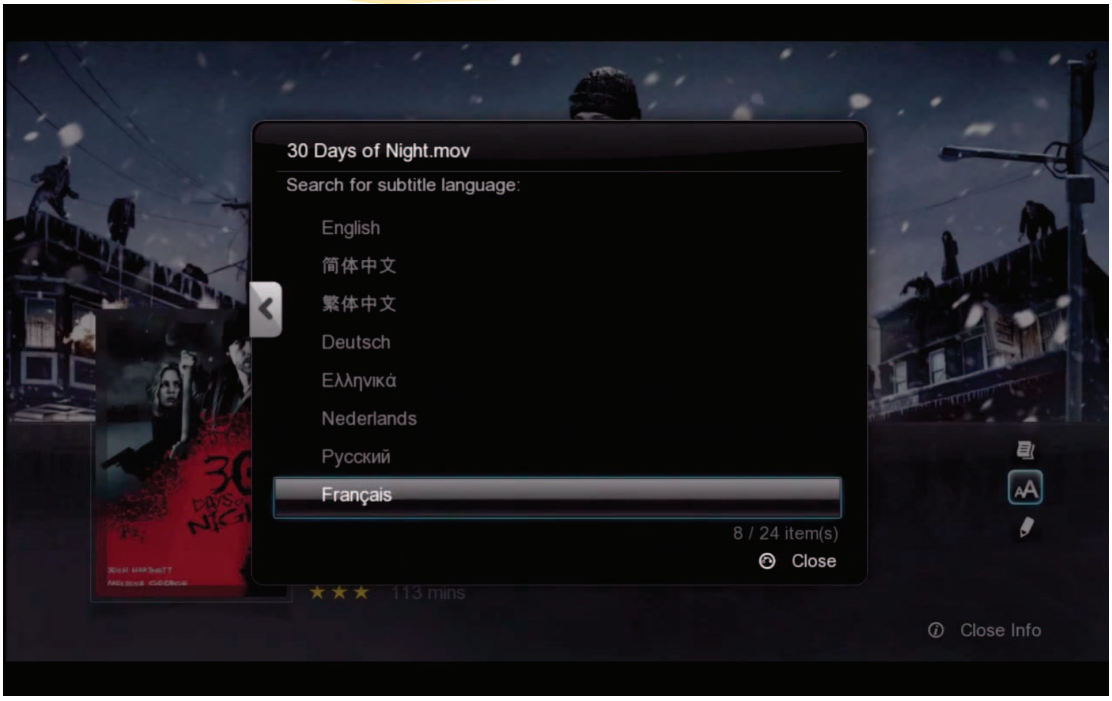

3. Press (GREEN) to search for other language.
4. After downloading the subtitle, it will be saved to the same location of your movie file.
   tips: Please ensure that your source drive is setup for write permission.

All Rights Reserved ©

13. Media Playback Remote Function

When watching movies, the below additional control are available.

AUDIO	Switch between audio tracks, if your video contains multiple audio tracks.
Subtitle	Subtitle options, enable or disable subtitle. Sync time, adjust font size or color.
Time Seek	Quickly jump to pre-define time within the movie.
Repeat	Repeat current movie.
Menu	Bring up menu options for SimpleBD navigation.
Mute	Mute sound.
Info	Shows you filename, audio codec's and bitrate of movie.

Listening to Music

ENTER	Play current highlighted music track.
PLAY	Play all tracks within the folder.
PREV / NEXT	Play previous or next track within the folder.
REV / FWD	Rewind or Fast Forward.
REPEAT	Repeat current music track.
Volume	Increase or decrease volume.
MUTE	Mute Sound

Viewing photo

ENTER	View current highlighted photo.
PLAY	Start slideshow within the folder.
PREV / NEXT	Toggle previous or next photo.
INFO	Useful information such as EXIF is display

All Rights Reserved ©

14. Troubleshooting

My Popbox V8 doesn't start – no red LED on the player.

Please check that the power cord is plugged in and the power-lead is inserted fully into the power terminal.

Popbox V8 stuck on the splash screen

Unplug the player for a few minutes and then try again. If problem persist, please contact our technical support team.

Nothing appears on my TV screen after several minutes.

Check all the cable connections and check your TV settings for the correct TV INPUT.

Can't upgrade the firmware – System prompt error

Please recycle the power on your Popbox V8 and try again.

I have poor performance from wireless streaming.

Wireless connection has lower bandwidth compared to wired and wireless signal strength is vital for smooth video streaming. You may wish to add-on a wireless range extender to improve your signal strength if problem persist.

Apps Market – Connection fail
Please make sure that you have a valid internet connection.

Remove all Apps from My Apps quickly.
To remove all apps installed on your Popbox V8. You may want to consider resetting the player to factory default. This will flash the memory on the device and you have a fresh Apps market.

All Rights Reserved ©